

425-6544

7" PRINTER FACEPLATE for BROTHER 4" PRINTER



For use with the...
brother RJ4030 4" Printer

ORDERING INFORMATION

425-6544 7" Faceplate for Brother RJ4030 4" Printer

1



Mount the Brother printer faceplate into the bottom of the Jotto Desk console.

2



Loosen knob to release the printer faceplate from its secure position.

3



Pull up to remove faceplate with printer from console when the paper roll needs changing.

SCAN QR CODE FOR VIDEO

