 




WWW.JOTTODESK.COM
877.455.6886

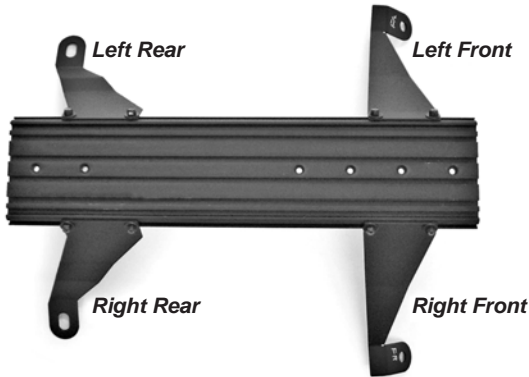

YOU HAVE ORDERED THE FOLLOWING: 425-6206		
QTY	PART#	DESCRIPTION
1	425-1604	EXTRUDED FLOOR PLATE X 28"
1	425-3063	FLOOR PLATE LEG EXPEDITION
1	425-3064	FLOOR PLATE LEG EXPEDITION
1	425-3065	FLOOR PLATE LEG EXPEDITION
1	425-3066	FLOOR PLATE LEG EXPEDITION
1	425-2599	CONSOLE, PARTS, HARDWARE BAG(12)

SC-FP INSTALLATION INSTRUCTIONS ('03-'15 - 28" EXPEDITION floor plate)

 
STEP 1: Check to see that you have the parts listed above.

STEP 2: Remove front and back inside driver and passenger seat rail bolts. Loosen respective outside seat bolts.


STEP 3: Slide four provided hex head bolts down each angled side rail of the floor plate. Align the bolts with the holes located at the top of the floor plate mounting legs. Use the provided washers and Nylock nuts to attach the floor plate to the legs. You will securely tighten these nuts in Step 5. Refer to picture above for proper placement of floor plate legs. Each leg is specific to mounting location.


STEP 4: Position floor plate legs underneath seat rails aligning the holes of the seat rails and floor plate legs. Insert factory seats bolts through seat rail and floor plate leg holes and fasten securely. NOTE: You may need someone to help hold the seats apart while you line up floor plate legs.

STEP 5: Adjust floor plate to desired position and tighten nuts on floor plate mounting legs

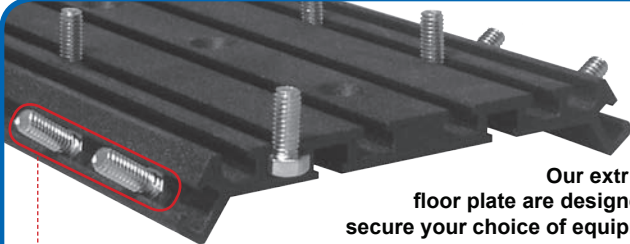

TOP-DOWN INSTALLATION

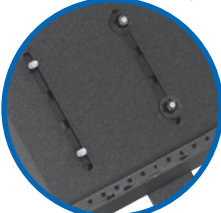 



*Floor plate leg bolts.

Our extruded floor plate are designed to secure your choice of equipment consoles and other accessories within your vehicle by using top-down installation.

*This model is not representative for all.

