





## 425-6615 '13-'19 Ford PI Utility Floor Plate


## Installation Instructions

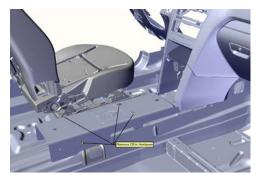


Remove (6) OEM screws with 10mm and 8mm socket to remove OEM factory floor plate. (4) screws on the top and (2) on the side.

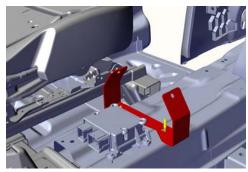


Thread the M6x60 studs into the previously removed front OEM bolt locations. Place the front bracket over the studs.

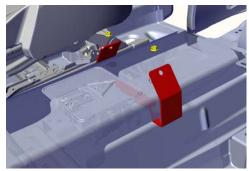


Reinstall factory floor plate on top of the floor plate bracket. Snug the M6 nuts with a 6mm socket to hold it in place.

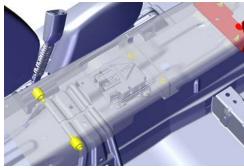


Replace the remainding OEM hardware to secure the factory OEM floor plate.

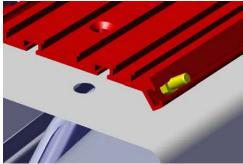


Insert the (4) 5/16-18 bolts in the side channel of the floor plate (two per side). Align the floor plate bolts with the holes in the front bracket, snug the 5/16-18 nuts with 1/2" socket to hold it in plate.

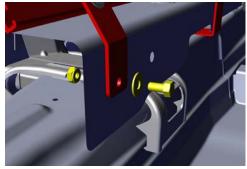

Align the rear brackets up with the rear hole on the rear of the OEM floor plate. Insert the 5/16-18 bolt through the washer and secure it with the provided 5/16 nut.

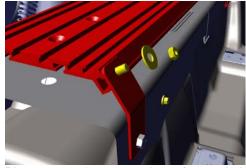

Place a washer over the 5/16-18 bolt previously inserted in the side of the floor plate. Place a 5/16-18 nut over the bolt snug to hold into place.

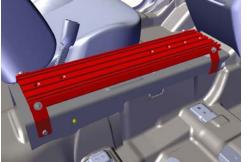

Adjust the floor plate by sliding it forward or back to clear the dash area. Once desired position is set, tighten the (4) 5/16-18 bolts with a 1/2" socket.


\*Use other side for vehicle purchased with 85D Package






## 425-6615 '13-'19 Ford PI Utility Floor Plate

## Installation Instructions

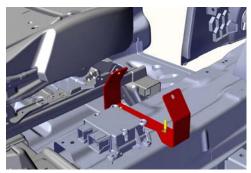


Thread the M6x60 studs into the front OEM bolt locations. Place the front bracket over the studs. Snug the M6 nuts with a 6mm socket to hold it in place.

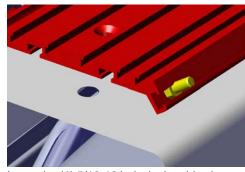


Insert the (4) 5/16-18 bolts in the side channel of the floor plate (two per side). Align the floor plate bolts with the holes in the front bracket, snug the 5/16-18 nuts with 1/2" socket to hold it in plate.



Align the bracket up with the hole of the metal flange that protrudes from the center transmission hump. Insert the 5/16-18 bolt through the washer and secure it with the provided 5/16 nut.

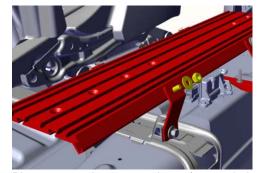

Place a washer over the 5/16-18 bolt previously inserted in the side of the floor plate. Place a 5/16-18 nut over the bolt snug to hold into place.

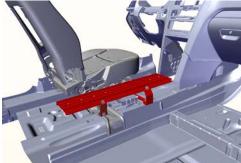

Adjust the floor plate by sliding it forward or back to clear the dash area. Once desired position is set tighten the (4) 5/16-18 bolts with a 1/2" socket.

\*Use other side for vehicle purchased with OEM floor plate

If you have questions or need further assistance please call Technical Support: 1.877.455.6886

