 




ZRT GUNLOCK TIMER

Installation Instructions

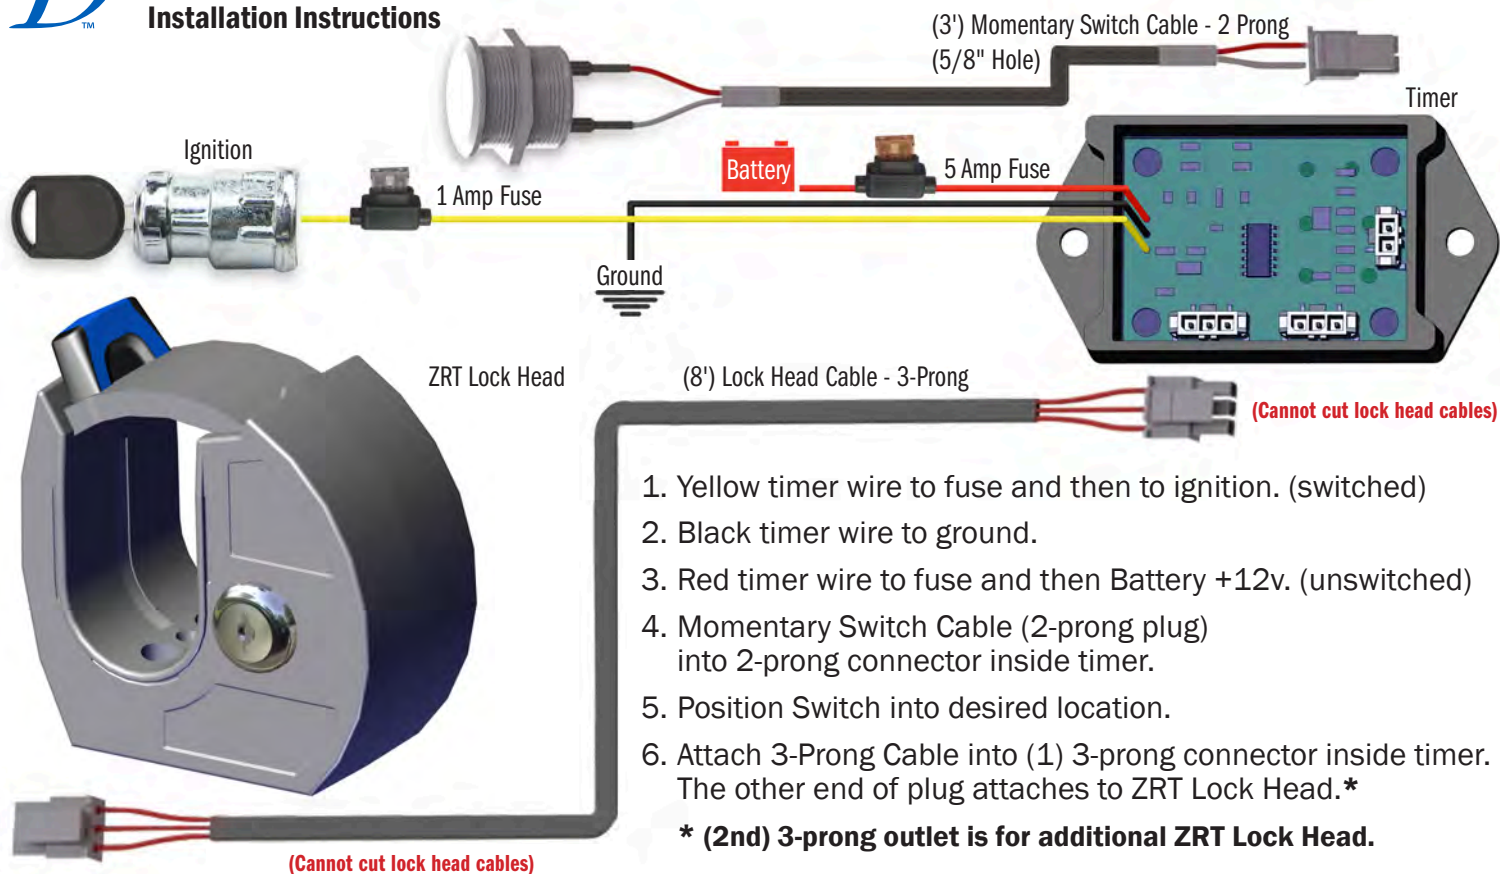


1. Yellow timer wire to fuse and then to ignition. (switched)
2. Black timer wire to ground.
3. Red timer wire to fuse and then Battery +12v. (unswitched)
4. Momentary Switch Cable (2-prong plug) into 2-prong connector inside timer.
5. Position Switch into desired location.
6. Attach 3-Prong Cable into (1) 3-prong connector inside timer. The other end of plug attaches to ZRT Lock Head.*

*** (2nd) 3-prong outlet is for additional ZRT Lock Head.**



 SIREN CONTROLLER

Wiring Instructions

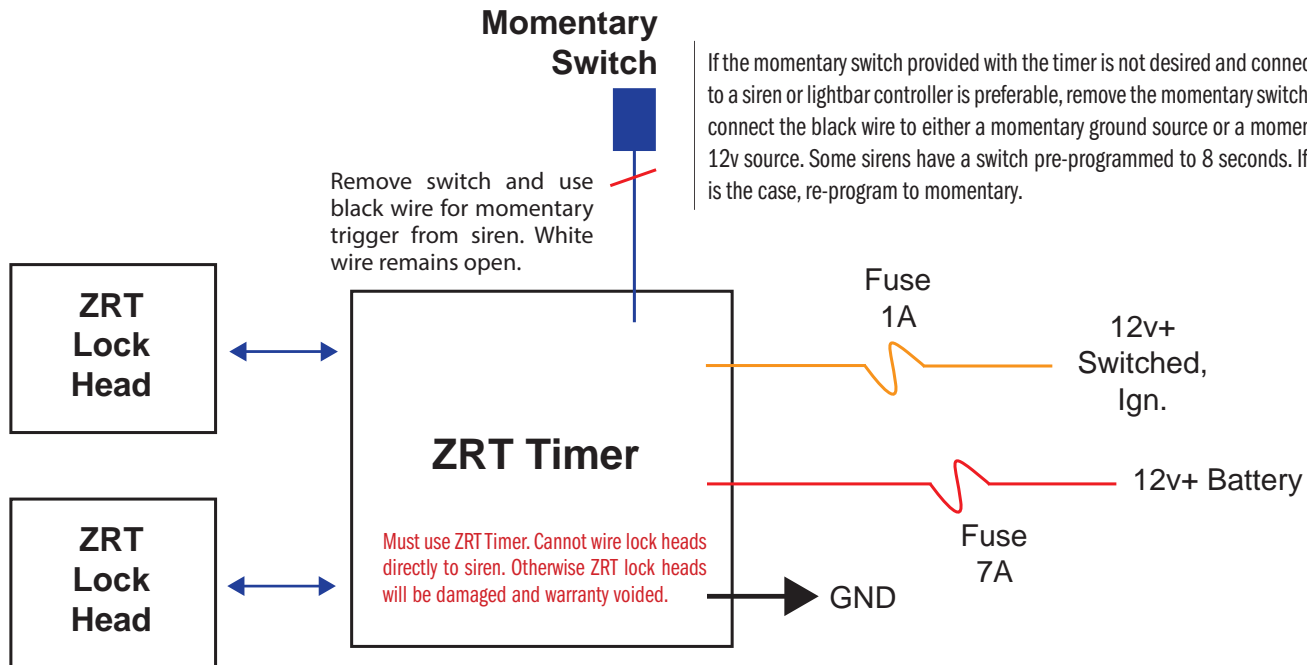

209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 1/24

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.

Specifications subject to change without notice.

