



Installation Instructions

Parts Included: Hardware Bag with Upper Partition Mounting Brackets and Necessary Nuts, Bolts, Etc.

DUAL WEAPON

475-2001


475-1066

475-0849


475-0585 475-0584

SINGLE WEAPON

- 475-0104 GR2-AR-BLM Vertical Mount to Flat Partition Only
- 475-0851 GR3-870-XTRD-GL3XL Vertical Mount to Flat/Recessed Housing
- 475-0850 GR3-AR-XTRD-GL3XL Vertical Mount to Flat/Recessed Housing
- 475-0701 GR9-870 Center Mounted Vertical Mount to Flat/Recessed Housing
- 475-0192 GR9-870 Vertical Mount to Flat/Recessed Housing
- 475-0191 GR9-AR-BLM Vertical Mount to Flat/Recessed Partition

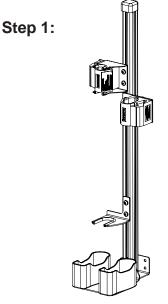

475-2001 - GR9-AR-BLM-870

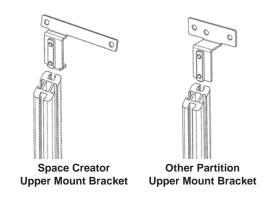

GR3-AR BLM-870-XTRD VP3/8/9

GR3-870-AR-GL3XL (1 GL3XL Lock) Vertical Mount to Flat/Recessed Housing


GR9-Remington 11-87-AR-BLM Vertical to Flat/Recessed Housing

GR9- Benelli Nova-AR-BLM Vertical to Flat/Recessed Housing

GR3-AR-870-XTRD-GL3XL (2 GL3XL Locks) Vertical Mount to Flat/Recessed Housing


Attach either Upper Mount Bracket to extrusion, sliding T-slot retainer into rear slot. Position as shown below and tighten when in correct location.

Step 2:

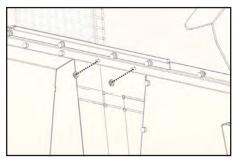


Remove two flange nuts while your helper is holding the carriage bolts in place from the back seat.

Step 3:

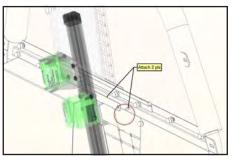

Place the gun mount assembly in the recessed area of the partition. Insert the top bracket onto the carriage bolts and secure with previously removed flange nuts.

Step 4:

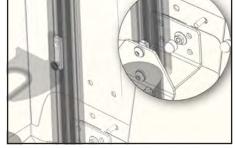

Attach the lower bracket with the provided carriage bolts and flange nuts. Secure all four mounting points and finish assembly with provided black plastic nut covers.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886

209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 3/25 Jotto Desk[™] is a patented product and Registered Trademark of Assembled Products[™] Corporation. Specifications subject to change without notice. 050-0124-00

