



425-6174
 '13+ Ford PI Sedan
 Contour Console

Installation Instructions


***Not compatible with
 Ford Police Interceptors
 ordered with Interior
 Upgrade Package.**



Remove (6) 8mm bolts to remove OEM cover plate.



Temporarily remove OEM cover plate and set aside.

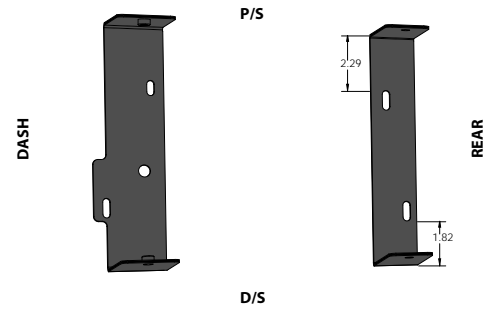


Proper placement / Position of Mounting Brackets.



Using provided hardware (mounting studs) secure Front Mount Bracket and Rear Mount Bracket. Finger tighten. Replace OEM cover plate.



When OEM cover plate is in position, tighten down bracket location with provided nuts onto previously install studs. Reuse OEM bolts in rear side locations.

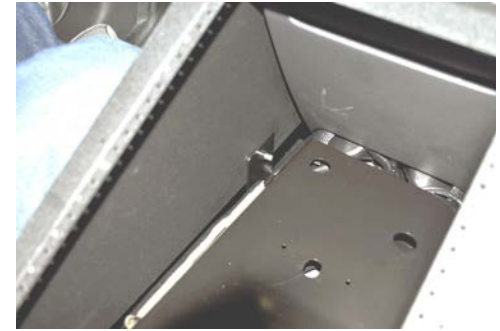

Position Contour Console into dash area. Make sure that the console is "inside" the side tabs of the Rear Mount Bracket.



Secure at the front/dash area from the outside of the console using provided 5/16" x 5/8" (long) button head allen bolts/washers.



Push 1/4" - 20 x 3/4" carriage bolt through rear area of outside of console and through bracket. Secure at the rear area from the inside of the console using provided 1/4" - 20 flange nut.



Using 8mm deep well socket – completely tighten the OEM cover plate mount points which will also completely tighten the Front/ Rear Mount Brackets.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • WWW.EVERYTHINGBUTLIGHTS.COM • 7/12

Jotto Desk® is a patented product and Registered Trademark of Assembled Products™ Corporation. Contour Console™ has design and utility patents. Additional Patents Pending. Specifications subject to change without notice.