425-6195
TK-7 Standard Console™
Installation Instructions

Option A

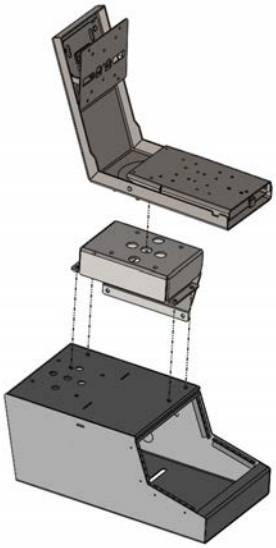

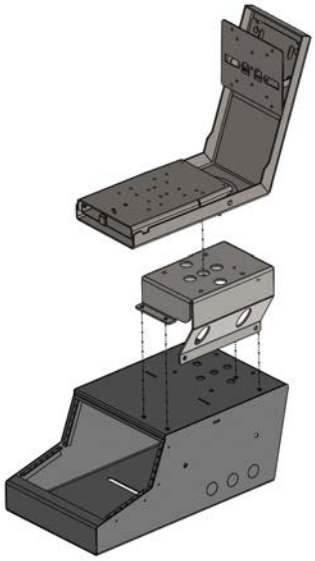

Secure the Upper TK Bracket with the Offset Riser Bracket to the Console using provided (6) 1/4-20 x 1/2” socket buttonhead cap screws and nylock nuts.

Option B

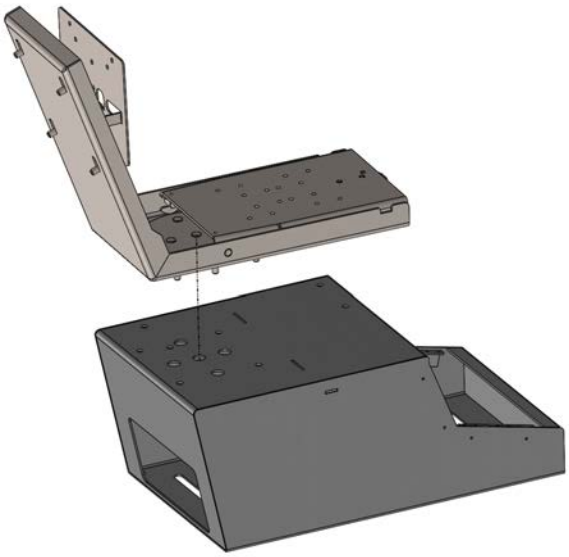

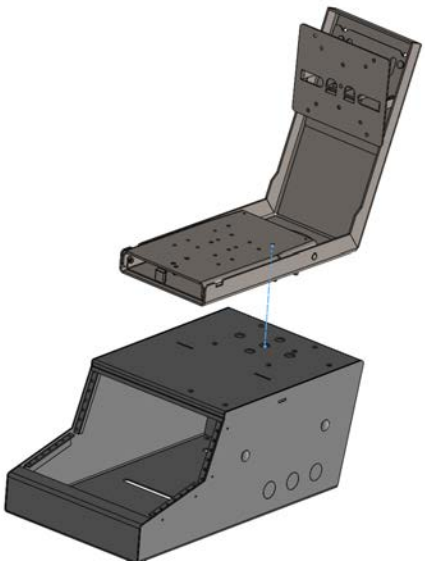

Remove the Offset Riser Bracket. Attach the Upper TK Bracket onto the Console using provided (4) 1/4-20 nylock nuts.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886

209 W. EASY ST., ROGERS, AR 72756 • www.EVERYTHINGBUTLIGHTS.com • 2/15

Jotto Desk® is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.