




425-6480
'15-'18 Silverado

Does NOT Work With
Floor Mounted 4x4
Shifter

Installation Instructions

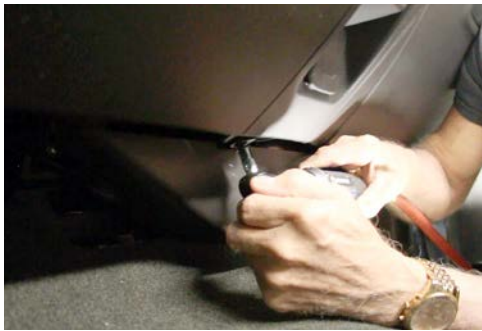

Remove (2) T15 screws from under side of mini-compartment of OEM dash.



Pull mini-compartment away from OEM dash releasing clips.



Uplug wire harness from mini-compartment.



Remove OEM 12V outlet from mini-compartment and relocate into Jotto Desk console.



Position Jotto Desk Contour Console into place.



Insert bolt spacer/stud into slots into where clips on OEM mini-compartment.



Tighten provided (2) 7mm and (2) 1/4-20 bolts inside the Jotto Desk console.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • www.EVERYTHINGBUTLIGHTS.com • 1/19

Jotto Desk® is a patented product and Registered Trademark of Assembled Products™ Corporation. Contour Console™ has design and utility patents. Additional Patents Pending. Specifications subject to change without notice.