



# CONTOUR CONSOLE

2016+ DODGE CHARGER WITH 12.1" UCONNECT DISPLAY

Installation Instructions

425-6483





1. Remove forward OEM console plastic cover to expose OEM mounting points for aluminum floorplate. Remove (2) 10mm flange nuts. Nuts will be re-used.



2. Remove (2) 8mm mounting screws at the rear mounting point of the aluminum floorplate. Screws will be re-used. This will allow the removal of the OEM aluminum floorplate and brackets.




3. This will expose the plastic OEM console. Remove (1) 10 mm flange nut from center of plastic console. Nut will be re-used.




4. With both hands, grasp the plastic OEM console on both sides and pull directly rearward to release.



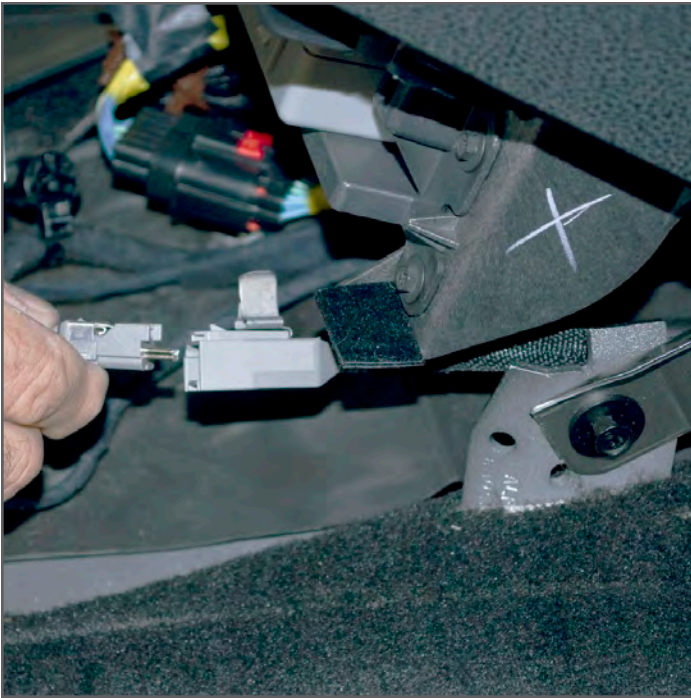

5. Disconnect wiring (4) harness for 12V and USB from OEM console.

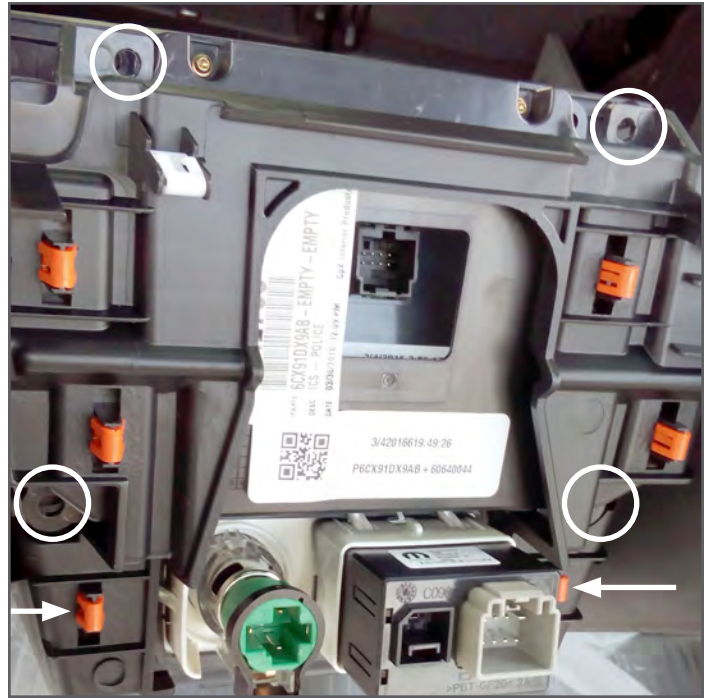

6. Remove Climate Control module by removing (4) screws from the back of the dash. Press out the (2) lower plastic spring clips (orange).



7. Slide module into provided cutout by aligning holes with studs on the backside of the console. Install provided nylock nuts to hold module into place.



8. Position console into vehicle reconnecting electrical plugs.



9. Secure console using OEM 8mm screws in the rear and OEM 10mm nuts in the front.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



**209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 2/25**

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.  
Specifications subject to change without notice.

050-0161-00

