



425-6501

2018+ Ford F150 SSV/Police Responder
2018+ Ford Expedition SSV
2017+ Ford F250
Floor Plate

Installation Instructions


If you have questions or need further assistance please call Technical Support: 1.877.455.6886

NOTE: If vehicle has 40/20/40 seats: Remove the center seat, unplug 12v power supply, remove OEM mounting brackets on floor board (see picture below) and proceed with install.


If installing in a Police Responder: Remove OEM mounting brackets on floor board (see picture below) and proceed with install.




Remove (2) OEM mounting brackets.

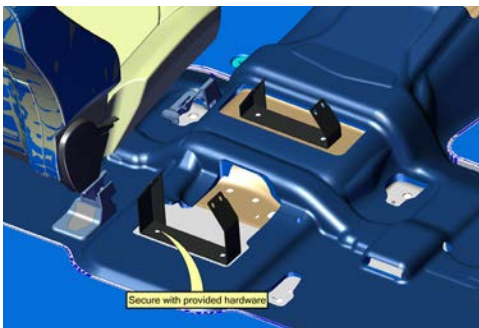

Place front and rear Floor Plate Brackets over hole locations. Secure with provided bolts or OEM hardware.

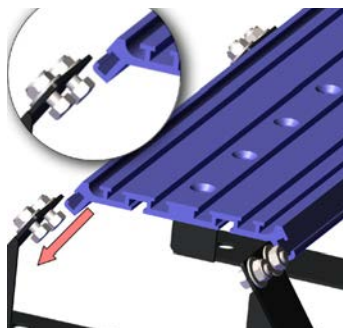

Lightly secure (8) of the 5/16-18 bolts, washers, and nuts to the Floor Plate Brackets. Slide the Floor Plate in from the rear, aligning the bolts with the side grooves on the Floor Plate side.

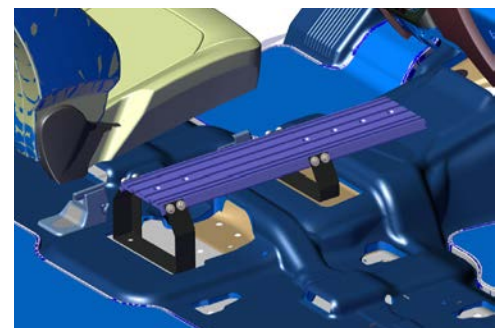

Place the Floor Plate in desired location by sliding forward and back. Secure by tightening the 5/16 nuts.

