



425-6538
 '11+ Charger
 AK-7 Solution

Installation Instructions



1
 Remove forward OEM console plastic cover to expose OEM mounting points for aluminum floorplate. Remove (2) 10mm flange nuts. Nuts will be re-used.




2
 Remove (2) 8mm mounting screws at the rear mounting point of the aluminum floorplate. Screws will be re-used. This will allow the removal of the OEM aluminum floorplate and brackets.



3
 Mark and cut OEM console for best placement of console.




4
 Remove (1) 10 mm flange nut from center of plastic console. Nut will be re-used. Remove the cut OEM console piece.

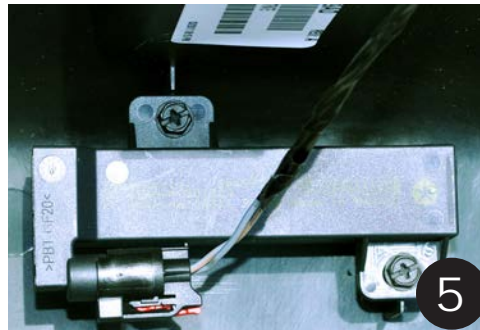

5
 Remove Ignition Proximity Sensor from plastic OEM console. Ignition Proximity Sensor should be remounted onto top of transmission hump with Velcro or double sided tape.



6
 Outside of vehicle insert 4 carriage bolts through bottom of plate. Align console slots onto carriage bolts and finger tighten with provided nuts.

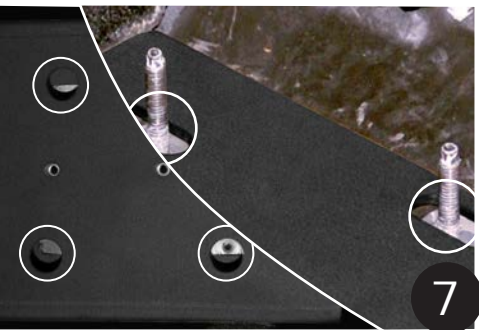

7
 Position floorplate/AK-7 onto transmission hump. Aligning the holes of the bracket with the OEM mounting studs. Tighten bolts and flange nuts.



8
 Position Jotto Desk AK-7 Console into desired position and fully secure bolts with nuts



9
 Position 12" extruded floorplate onto floorplate/AK-7 and secure using pan head bolts.

