



425-6693
 '11-'13 Caprice
 9C1 MDC Console


Installation Instructions



1
 Remove OEM center console cover by removing side clips (see photo for location), and then pull up on plastic to release snaps.



2
 Remove 13mm nuts from the side of the transmission hump between seats and console. Two per side.

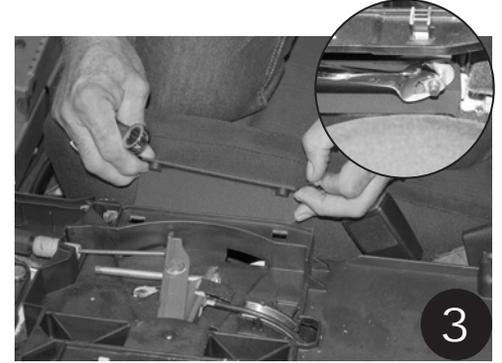

3
 Install mounting brackets using provided 8mm hex nuts from previous step. Making sure to use the correct bracket on each side. Each should be marked P/S or D/S.



4
 Remove 10mm bolts at the rear of the OEM floor plate. One per side.



5
 Install rear mounting brackets using the OEM 10mm bolts from previous step.




6
 Install Caprice 9C1 MDC Console onto OEM center console, making sure that our brackets go inside of console/floorplate.



7
 Attach front section using (2) 1/2" button head flange bolts through floor mounting plate into side mounting bracket. Repeat for other side.



8
 Attach rear section using (2) 1/2" button head flange bolts through rear of floor mounting plate into rear mounting brackets. Repeat for other side.

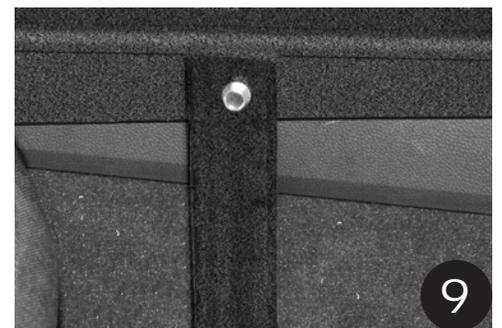

9
 To attach side reinforcement bracket, locate pre-drilled hole on the passenger side of the floorplate (located above the front end of P/S seat rail). Attach using 3/8" self-tapping screw.



Where reinforcement bracket hangs down, mark location for AVK fastener installation. Then rotate bracket away. Center punch and pre-drill 1/2" hole at marked location.



Insert 5/16" - 18 x 1.5" hex bolt through 3/8" flange nut and thread into AVK Fastener. Hand tighten until the flange part of the nut touches the AVK Fastener. Insert assembly into hole, and use a 9/16 wrench to hold the flange nut. Apply pressure to flange nut and use impact gun to tighten AVK Fastener until it does not spin freely.



Remove bolt. Rotate reinforcement bracket back down and secure side reinforcement bracket into AVK using 1/2" hex bolt.



Place the straight arm onto mounting post where the ratchet handles and Jotto Desk logo is facing the passenger's seat.



Install Cable-Dock™ onto straight arm.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • www.EVERYTHINGBUTLIGHTS.com • 12/13

Jotto Desk® is a patented product and Registered Trademark of Assembled Products™ Corporation. Contour Console™ has design and utility patents. Additional Patents Pending. Specifications subject to change without notice.