




Installation Instructions
'13+ Police Interceptor Sedan
Push Bumper
475-0298

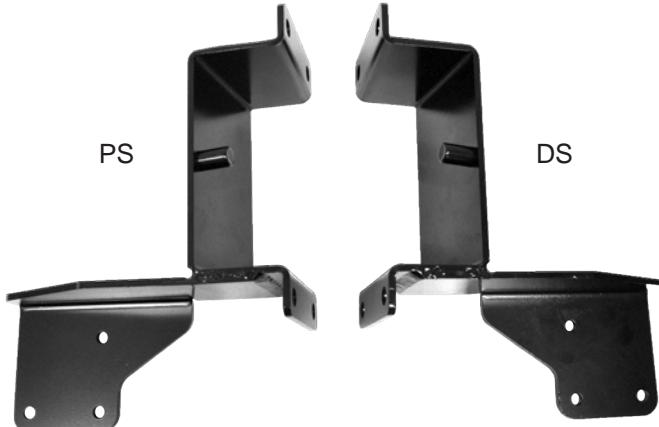

Front Mounting Brackets



Back Mouting Brackets



Oil Cooler Brackets




Upper Brackets



Universal Sedan
Vertical Bumper Assembly

Installation Instructions


GOJOTTO.COM
PERFORMANCE MATTERS

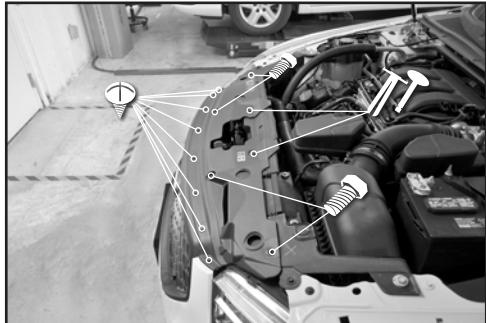

Begin removing OEM bumper facia by removing (8) Phillips screws, (4) 10mm bolts, and (2) clips from the top of OEM Bumper.




You will need to turn the wheels inward for easier access to wheel wells. Remove (2) 5mm bolts, (1) Phillips plastic screw, and (1) clip. Repeat for other wheel well.

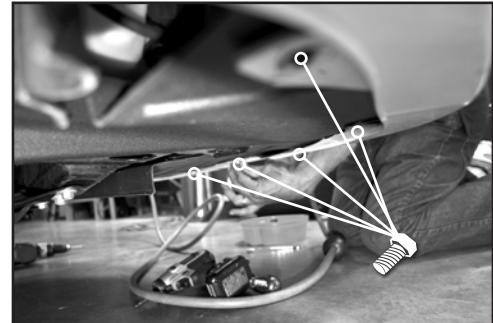


On the under side of bumper remove (8) 10mm bolts from OEM bumper facia.
(5 Locations Shown)




Pull sides of OEM bumper facia away from wheel wells, and pull forward. Remove OEM bumper facia set aside from vehicle.

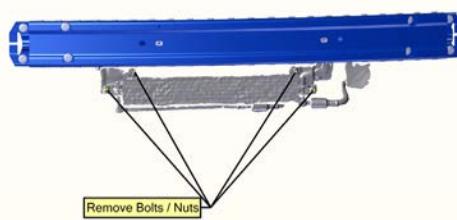


Remove (2) 8mm bolts and (2) 10mm nuts to remove oil cooler from OEM brackets. Carefully push oil cooler aside for later connection on to Jotto Desk Oil Cooler Brackets.

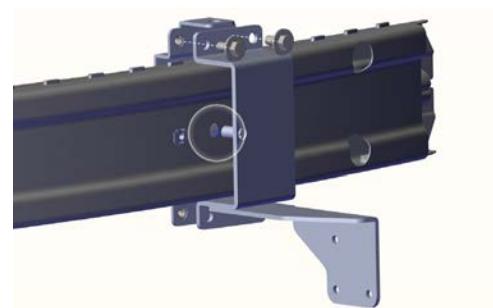


Using the Front Main Bracket, position the bracket onto the OEM bumper so that the stud fits into the OEM hole. Then use a Rear Main Bracket to loosely secure the top two holes with provided 9/16" bolts and washers.

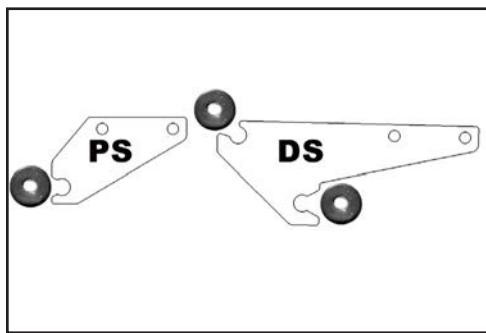

Place the proper rubber grommets onto Oil Cooler Brackets.

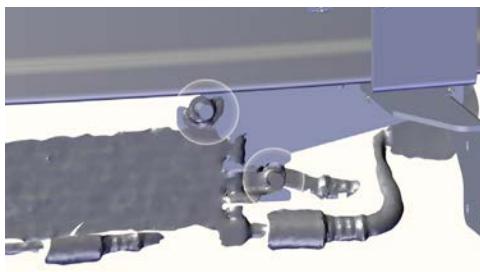

Then secure Oil Cooler Brackets to the lower front of the Front Main Bracket and Rear Mount Bracket. Oil Cooler Brackets will set between Front Mount Bracket and bolts/washers. Secure in place using provided 9/16" bolts.

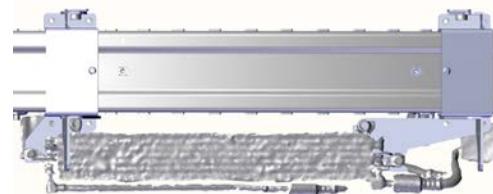


Move oil cooler onto front of Oil Cooler Brackets and secure into place reusing OEM hardware. (8mm bolts/10mm nuts)

Continued on back...




Installation Instructions

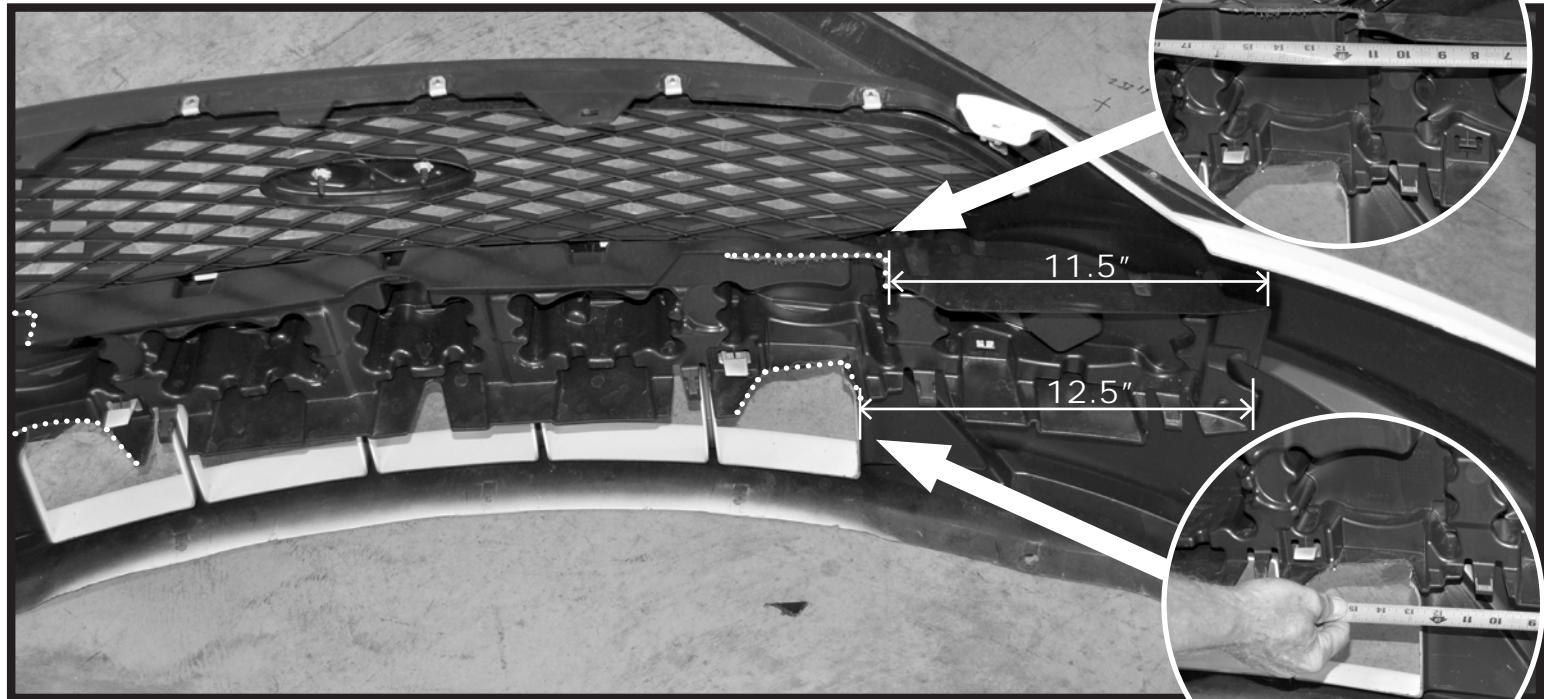

Make a cut, 1.25" deep x 5" wide into upper plastic filler panel section of OEM bumper by measuring 11.5" from edge of filler panel of OEM bumper inward. Repeat for other side.


On lower plastic filler panel section of OEM bumper, measure 12.5" from edge of filler panel of OEM bumper inward. Cut the thicker plastic following the curve of the section (as shown above). Repeat for other side.

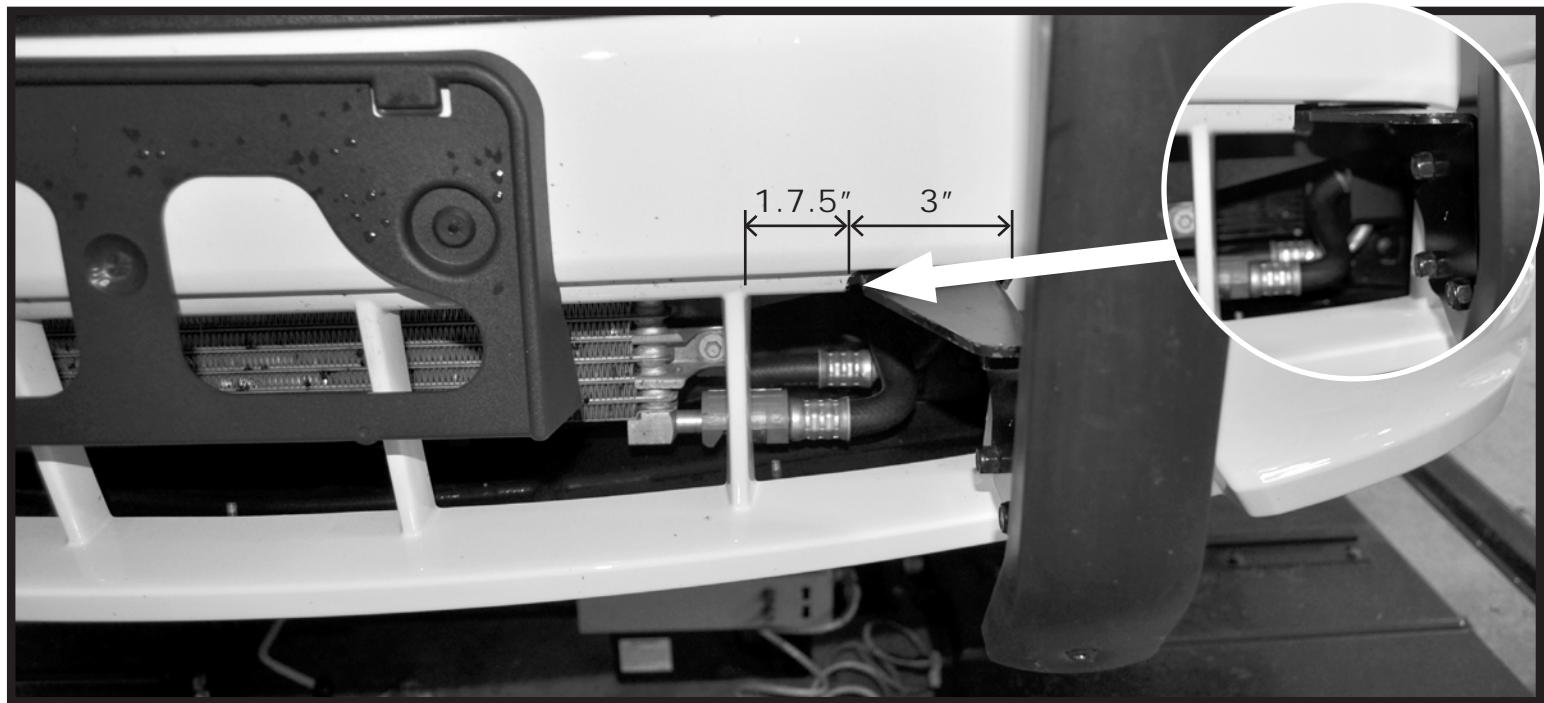

Measure 1.75" from the lower opening edge in OEM bumper facia outward. Cut upward to the lip of the facia. Following the curve of the section, cut over 3" and down (as shown above). Repeat for other side.



Installation Instructions

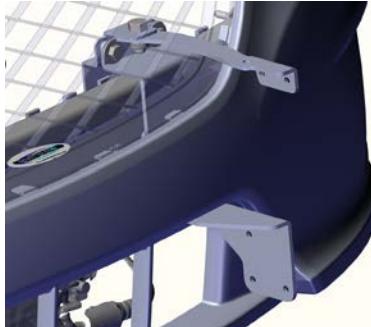

Set OEM bumper on lower protruded section of Front Main Bracket for temporary support. Slide Upper Brackets into front grill of OEM bumper. The proper location will be the second row up from bottom of grill and the last opening for each side. Secure Upper Bracket to the top PEM nut on the Rear Main Bracket using provided 3/4" bolt.



Now push OEM bumper facia back onto original position, making sure Front Main Brackets and Upper Brackets have fit through OEM facia. Reattach OEM bumper facia in reverse order of removal.



Place Universal Sedan Bumper onto exposed brackets. Secure using provided (12) 1 1/2" bolts and nuts. (6 per side)

