INSTALLATION INSTRUCTIONS
‘13-‘19 FORD PI UTILITY SPACE CREATOR
Vehicle Partition Featuring Bidirectional Recessed Housing

(U.S. Patent No. 8,690,216)

Before beginning the installation, confirm that you have received all of the parts for your package. Read the instructions completely before starting installation.

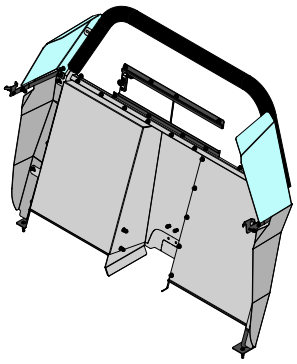

TOOLS NEEDED:

- Ratchet
- 7/16” Socket
- 13 mm Socket
- 7 mm Socket

Parts Included:

- Hardware Bag With Necessary Nuts, Bolts, Etc.

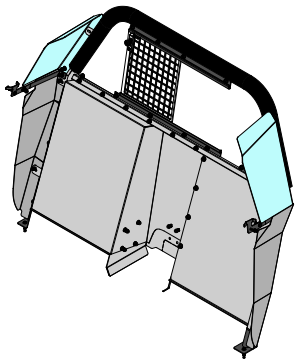

SCA Wings Set

Center HSEP

(2) B Pillar Bracket

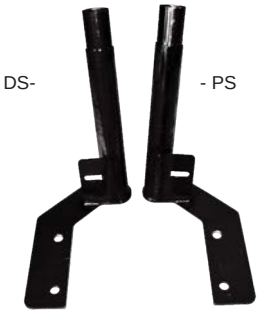

(2) Mounting Foot

Optional DS & PS HSEP

INSTALLATION INSTRUCTIONS

1. Pop the top/bottom covers of the rear seat grab handles, exposing (2) 7mm hex bolts. Remove bolts and remove handle completely. B-Pillar bracket will secure to the lower mount point and utilize OEM hardware. (Pic A)
2. Remove the front and rear door step plates from both Drivers and Passengers side of vehicle. (Pic B)
3. Using a small flat head screw driver – place in backside of lower seat belt assembly and turn counter clockwise. This will release seat belt from lower seat belt assembly. (Pic C)
4. Remove rubber tube/cover from lower seat belt assembly
5. Pop lower B Pillar trim out and remove from vehicle temporarily.
6. Remove 13mm seat belt bolt from lower seat belt assembly. (Pic D)
7. Place partition mount foot under lower seat belt assembly and re-install OEM 13mm bolt. (Pic E)
8. Re-attach lower B Pillar Trim, rubber tube/cover on lower seat belt assembly and snap seat belt back into lower seat belt assembly.

A.

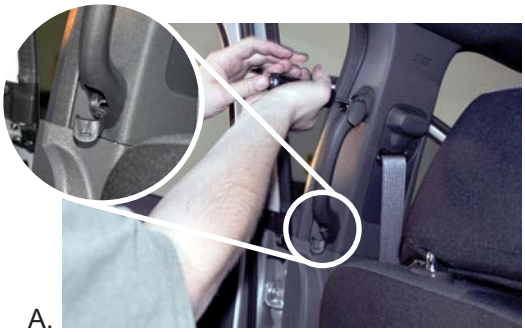

B.

C.

D.

E.

9. Attach B-Pillar Brackets to lower grab handle mount points on P/S and D/S (Pic F)

10. Place Partition frame WITHOUT Bi-Directional Recessed Housing (BDRH) into rear of vehicle – placing the frame of the partition onto the mounting feet. ***To avoid interference with headliner, remove blue protective film covering window at this time.*** Push partition frame forward to the B Pillar Brackets and secure using the middle slot of the mounting tabs. (Pic G)

11. To avoid interference with headliner, remove protective film covering window at this time. Before you install the BDRH you will need to remove the lower window channel and sliding window by loosing the hand tightened carriage bolts and nuts. Remove and set aside for reuse. ***NOTE: Half window partitions can go to Step 13. Full window with security wire partitions will require Step 12.***

12. **WHEN INSTALLING THE BDRH, BE CERTAIN BDRH THAT THE SAFETY-WIRE IS INSTALLED ON THE OUTSIDE OF THE BDRH. IT WILL BE NECESSARY TO PULL THE BOTTOM OF THE SAFETY-WIRE OUT SO THE BDRH CAN SLIP UNDERNEATH. (Pic H)**

13. Outside of vehicle, loosely attach the Center HSEP to the BDRH. With assistance, place the BDRH into the rear of the vehicle and secure the partition frame using the provided hardware. (Pic I)

14. Once the BDRH has been attached to the partition frame, replace lower window channel and sliding window. Secure with provided hardware.

F.

G.

H.

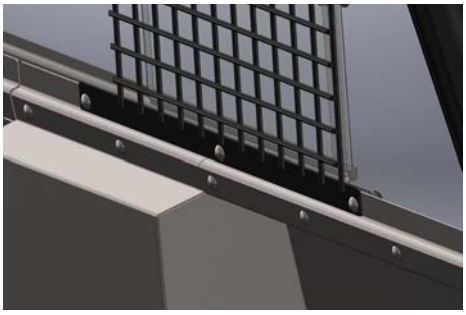

I.

15. Install the optional D/S and P/S HSEP to the partition and BDRH, using provided hardware.

16. Attach Lower Steel Side Wings to BACK/PRISONER side of the mount tabs on the partition frame using provided hardware. Use the bottom hole of the middle tab. (Diagram 1)

17. Attach Upper Poly Wings to the FRONT/OFFICER side of the mount tabs. Use the top hole of the middle tab with a carriage bolt. The top of the Poly Wing should be secured with a carriage bolt as well. (Diagram 1)

Diagram 1 Driver's Side of Partition

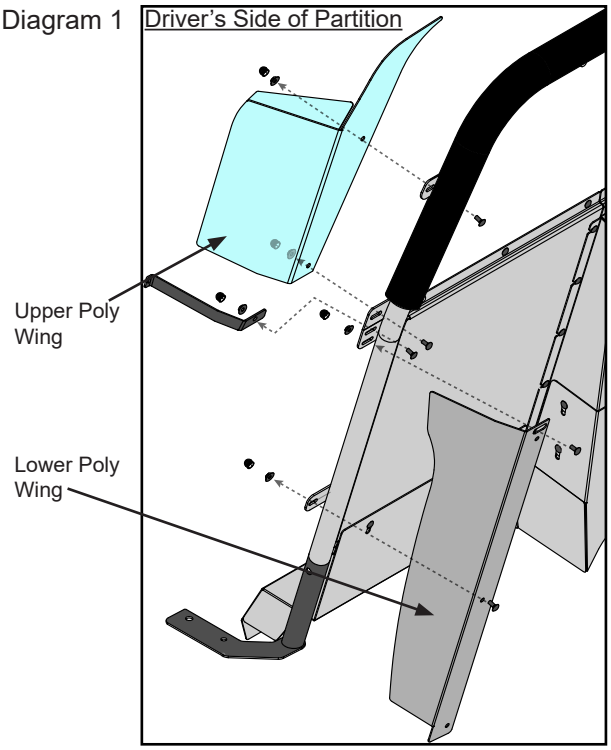

Jotto Desk® is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.