




GUN RACK - VERTICAL MOUNT TO SINGLE CELL

475-0368 - GR7-AR-BLM | 475-0369 - GR7-870 | 475-0370 - GR7-AR-BLM-870

Installation Instructions

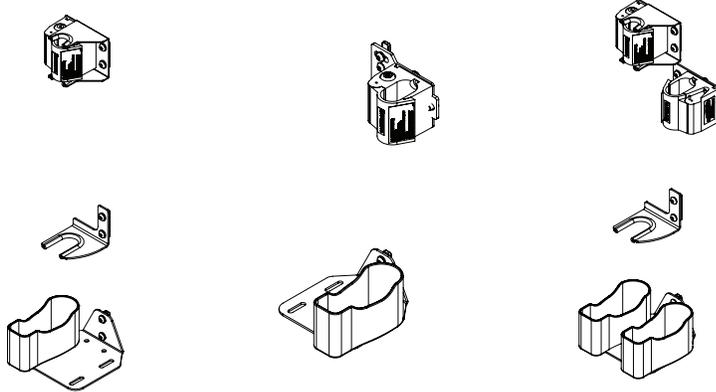

475-0368 - GR7-AR-BLM

475-0369 - GR7-870

475-0370 - GR7-AR-BLM-870



Pic 1



Pic 2



Pic 3



Pic 4

1. Insert a button head cap screw into each T-Block, just a few threads. (Pic 1)
2. Place T-Blocks one at a time into the base of Extruded Backbone of Single Cell, through notched out section. Slide T-Block up the channel, finger tighten to hold in place. (Pic 2)
3. Remove the top T-Block button head cap screw and loosely attach lock/bracket. Then remove 2nd T-Block button head cap screw and attach to other half of lock/bracket. Slide into temporary location and finger tighten down screws. (Pic 3) Repeat until all brackets are positioned on Extruded Backbone.
4. Place Butt Plate/Bracket at lowest point of Extruded Backbone and completely tighten. When the Butt Plate is secured, place weapon into vehicle to adjust locks/upper brackets into proper location. Tighten all Screws. (Be Careful Not To Overtighten and Strip The Head of Screw) (Pic 4)

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • JTOPUBLICSAFETY.COM • 3/25

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.

050-0131-00

