




SECURE GRID WINDOW ARMOR & ABS DOOR PANELS (OPTIONAL)

2011+ DODGE CHARGER

Installation Instructions

475-0420

475-0421

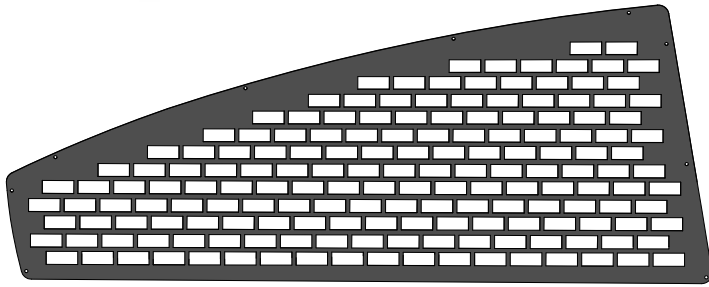

TOOLS NEEDED:

- Electric Drill
- #1 Phillips Head Drive Bit
- 3/32" Drill Bit

*****If installing ABS Door Panel with Window Armor, ABS Door Panel must be installed first*****

1. Roll down both rear windows.
2. Check the alignment of the top of the window armor with the top of the door frame.
3. Pre-drill 3/32" pilot holes into door frame through the (9) holes in around edge of each Window Armor piece.
4. Install (9) Black Truss Phillips Screws per window into holes made in Step 5.
5. Check that Window Armor is secure.



INCLUDES:

- (1) Driver Side Door Panel
- (1) Passenger Door Panel
- (2) Door Panel Spacer Brackets
- (6) Button Socket Head Cap Screws
- (8) Phillips Truss Head Screws

*****Complete this installation before installing Window Armor*****

1 - Remove OEM Door Panel and unplug electric connectors for the power window and lights (Pic 1 & 2).

2 - Make sure power window switch is connected to the harness. "Bag & Seal" connectors to protect them. Tuck into door frame and secure with plastic tie.

3 - Remove three (3) Hex Head Bolts from the top of the inner OEM door frame (Pic 3). Use OEM bolts to attach Door Panel Spacer Brackets.

4 - Attach Door Panel to Door Panel Spacer Brackets with Button Socket Head Cap Screws (Pic 4).

5 - Drill 7/64" pilot holes through the four (4) holes around the bottom and side edges of the Door Panel. Attach the Phillips Truss Head Screws into the pilot holes (Pic 5).



Pic 1



Pic 2



Pic 3



Pic 4



Pic 5

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • JTOPUBLICSAFETY.COM • 1/25

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.

050-0139-00

