



# CB4 Cargo Barrier

**SCA Compliant**


475-0769

Ford PI Utility (2013-2015)

## Installation Instructions

If you have questions or need further assistance please call  
Technical Support: 1.877.455.6886

Before beginning the installation, confirm that you have received all of the parts for your package.  
Read the instructions completely before starting installation.

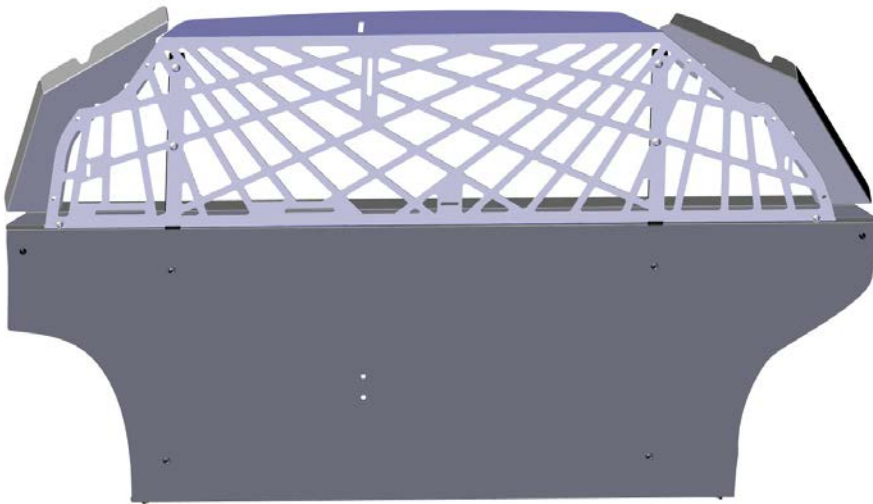

### TOOLS NEEDED:


- Ratchet
- $\frac{3}{16}$ " Hex Key Socket
- $\frac{7}{16}$ " Socket
- 18 mm Deep Well Socket
- T50 Torx Bit Socket

### PARTS INCLUDED:


- Hardware bag with necessary nuts, bolts, etc.




Rear Support Braces

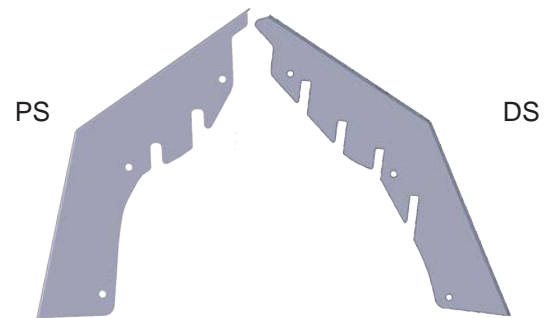

Side Poly Wings

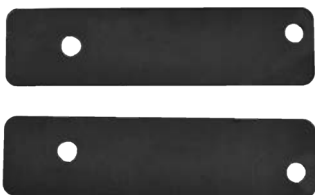

Floor Mount Brackets

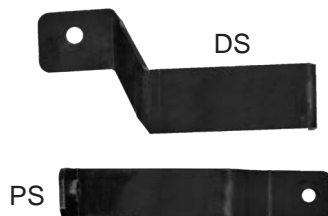

Inner Mount Brackets



Outer Mount Brackets



# Installation Instructions


If you have questions or need further assistance please call  
Technical Support: 1.877.455.6886




Remove (4) rear cargo net hooks.




Then pull OEM side panel away from cargo wall.

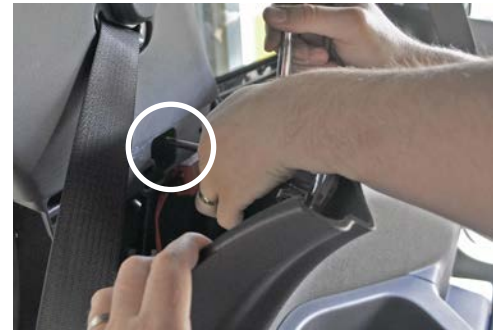

To remove upper OEM trim piece, use a 7mm socket to remove bolt, and then pull upper OEM trim panel away from vehicle frame.

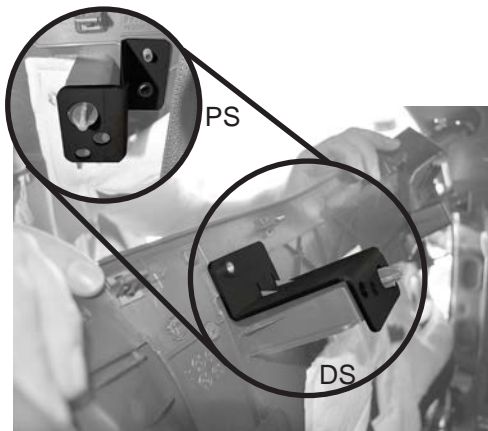

Using the proper outer mount bracket, place on OEM side panel as pictured. Bracket should contour to the trim. Bracket will sit secure onto trim. Mark and drill out hole using a 3/8" bit.

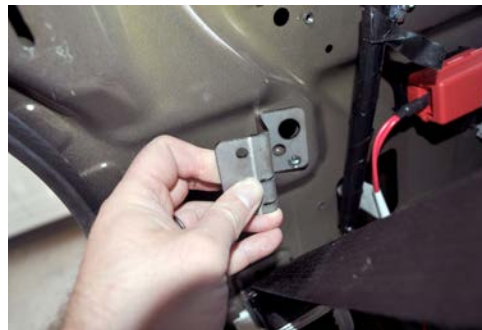

Using same outer mount bracket line up bracket to side paneling. Then mark location and install AVK fastener per AVK instructions. Secure outer mount bracket using provided bolt.




Replace both OEM upper trim and OEM side panel. The previously drilled hole will line up with the outer mount brackets.



Loosely attach the inner mount brackets through the pre-drilled hole located on the OEM side panel.



Remove OEM floor bolt behind the back seat near the rear wheel wells using a 7/16" socket.

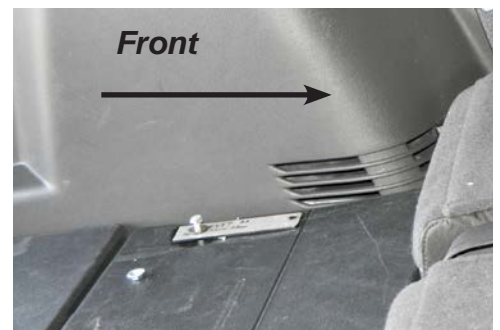

Loosely secure floor mount brackets and spacer under bracket using provided M8 x 1.25 x 100 hex bolts. By inserting bolt through hole that is centered in part, with the offset hole closer to the trim panel.



## Installation Instructions

If you have questions or need further assistance please call  
Technical Support: 1.877.455.6886




Place lower steel barrier into vehicle. Attach to floor mount brackets using (2) 1/4 x 20 hex bolts. (Making sure the steel barrier's lower lip with PEM nuts is seated under the bracket). Attach inner mount brackets to lower steel barrier using (4) provided 1/4 x 20 hex bolts.

**Barrier will angle away from back seat to allow access to storage area behind seat.**




Loosely attach Rear Support Braces passing the bolt through the rear cargo area.

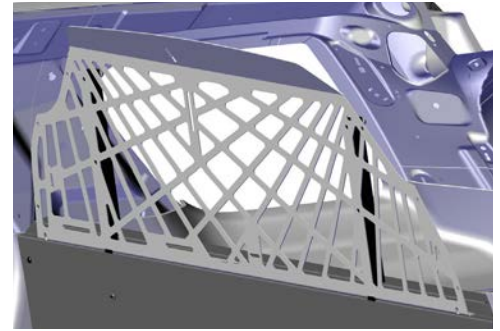


While still in the cargo area, so that the grid installs on the cargo side of the bracket. *Making sure 1/2" diameter rod is on the cargo side.*

Place upper secure grid into vehicle so that it sits on the lip of the lower steel barrier. Attach through the front of vehicle using washers and 1/4 x 20 button head screws into upper mount brackets.

Tighten secure grid to lower barrier before tightening rear support braces.

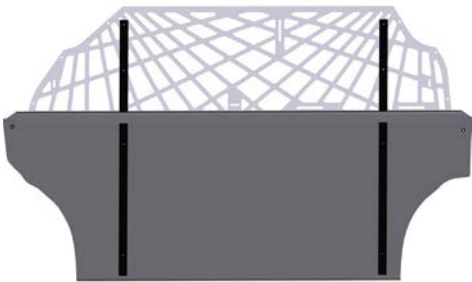


Tighten all bolts.

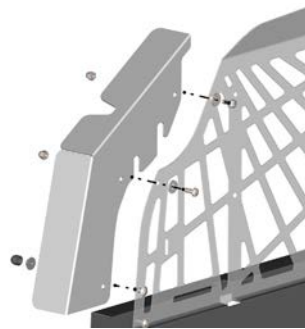

Install through rear of vehicle side poly wings. Secure using (2) nylon bolts and nuts, and (1) carriage bolt with flange nut.

# AVK Fastener Installation Instructions

AVK Installation video can be viewed at:  
<http://jottopublicsafety.gojotto.com/additional-categories/downloads.html>

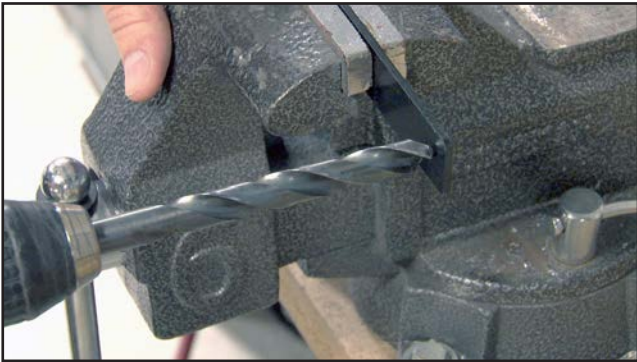


1. Drill out existing hole to 1/2" or drill new hole per installation instructions.



2. Place 5/16-18 x 1.5" long bolt through the 3/8" flange nut and hand thread bolt into the AVK Fastener.



3. Place into 1/2" drilled hole.

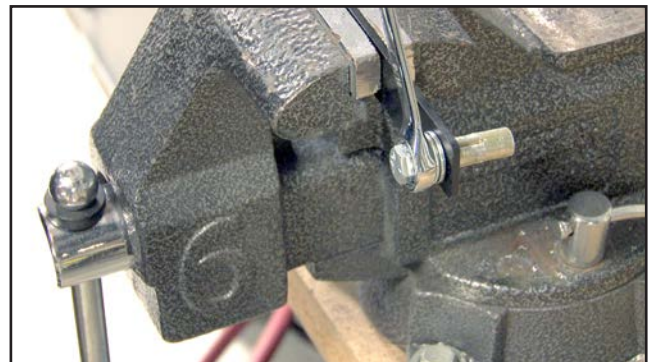

4. Use 9/16" box end wrench to secure the flange nut.



5. Apply pressure on the flange nut, pressing AVK Fastener into hole.
6. Using an air wrench, tighten the 5/16-18 x 1.5" bolt.



7. This will allow the AVK Fastener to secure onto the backside of the metal.
8. Remove 5/16-18 x 1.5" bolt.

RETURN TO STEP 2 OF THE GR4 INSTALLATION INSTRUCTIONS

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • [www.EVERYTHINGBUTLIGHTS.com](http://www.EVERYTHINGBUTLIGHTS.com) • 4/20

Jotto Desk® is a patented product and Registered Trademark of Assembled Products™ Corporation.  
Specifications subject to change without notice.