



# SECURE GRID WINDOW ARMOR

2020+ FORD PI UTILITY

Installation Instructions

475-0902

475-1486




## INCLUDES:

- (1) Driver Side Window Armor
- (1) Passenger Side Window Armor

## PARTS INCLUDED:

- Hardware Bag

1. Place Secure Grid Window Armor on top of OEM door panel.
2. Curve of Secure Grid Window Armor should be away from prisoner area.
3. There are holes around the perimeter of the Secure Grid Window Armor that match door frame.
4. Use provided hardware (#8 Phillips Screws) to attach Window Armor to door frame.

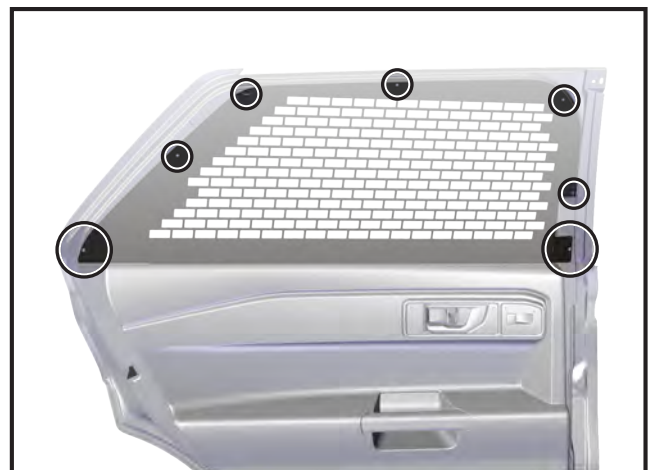



# DOOR CONTROL COVERS

2020+ FORD PI UTILITY

## Installation Instructions




### INCLUDES:


- (2) Door Control Covers

### PARTS INCLUDED:

- Hardware Bag

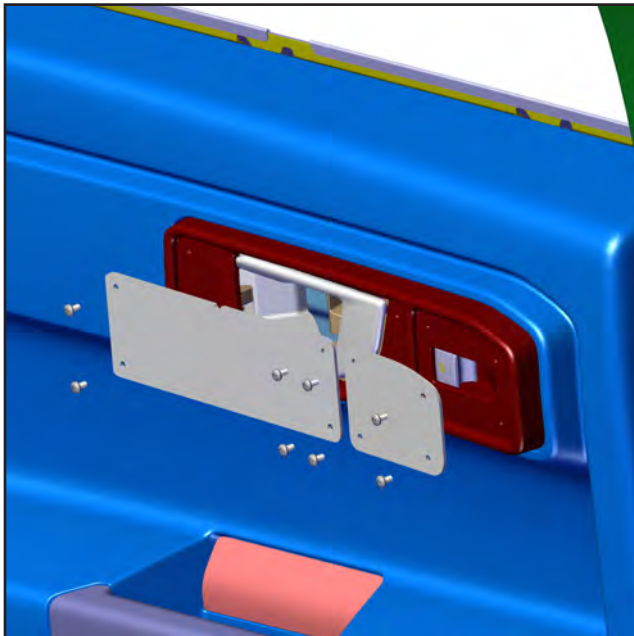

1. Position the Cover Plates over the Door Handle and the Lock.

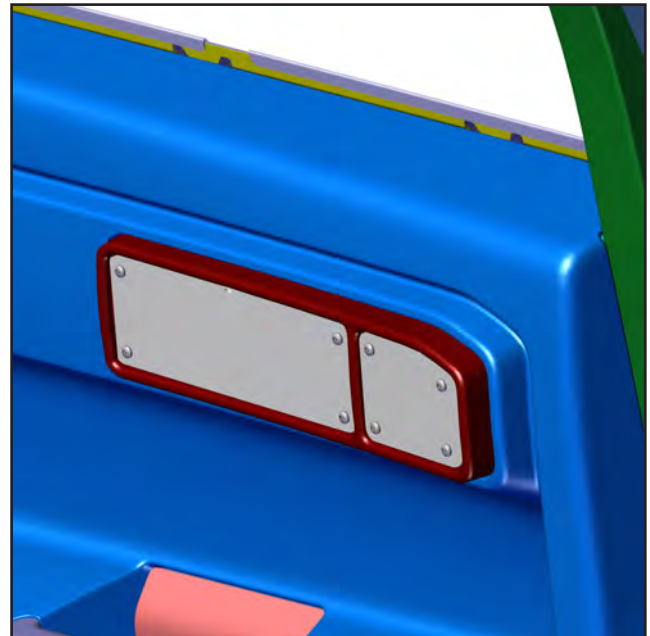

2. Secure in place with provided hardware.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 2/25

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.  
Specifications subject to change without notice.

050-0143-00

