



## CARGO COVER/EQUIPMENT TRAY (CB4) CHEVY TAHOE 2021+


**Installation Instructions** 

475-1851

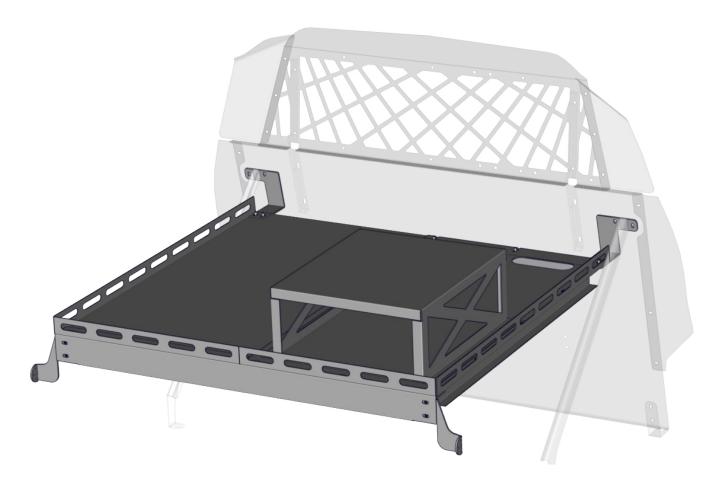


Before beginning the installation, confirm that you have received all of the parts for your package. Read the instructions completely before starting installation.

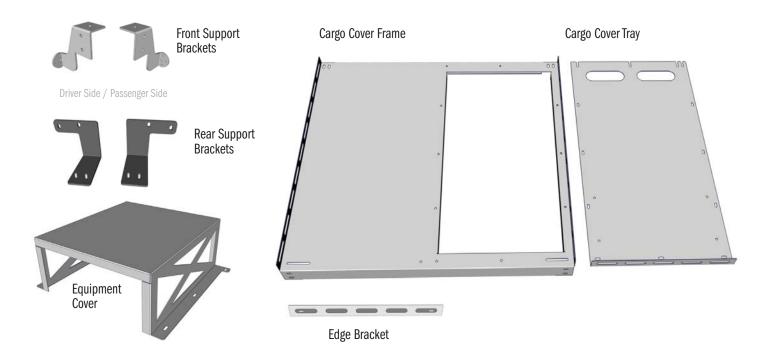

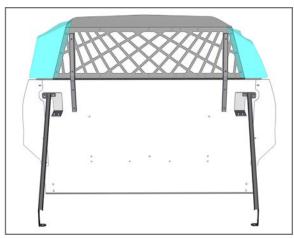


Remove the outer (2)  $\frac{1}{4}$ -20 x  $\frac{1}{2}$ " bolts attaching the Cargo Cover to the Top Bar Frame. Loosely secure the Driver Side and Passenger Side Rear Support Brackets with provided (2)  $\frac{1}{4}$ " lock washers and  $\frac{1}{4}$ -20 x  $\frac{3}{4}$ " bolts.

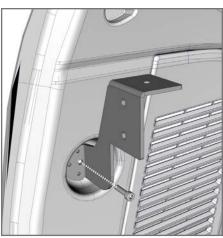







3. Loosely secure the Driver Side and Passenger Side Front Support Brackets with provided (2) M6 x 1.0 Socket Head Cap Screw.

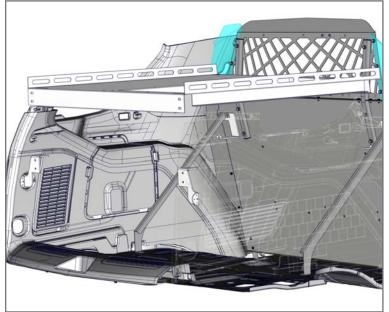


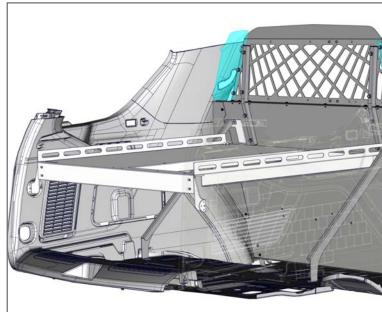


Place the Cargo Cover Frame onto, Driver Side / Passenger Side Front Brackets and Rear Support Brackets.

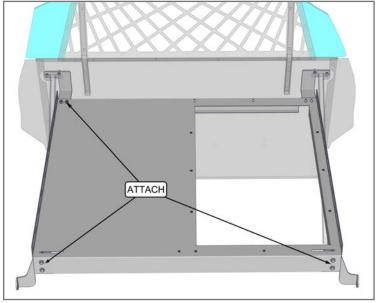


Secure the Cargo Cover Frame to the Drivers Side Rear Support Bracket with provided (2) 1/4-20 flange nuts and the Front Support Brackets with (4) 1/4" washers and 1/4-20 bolts.

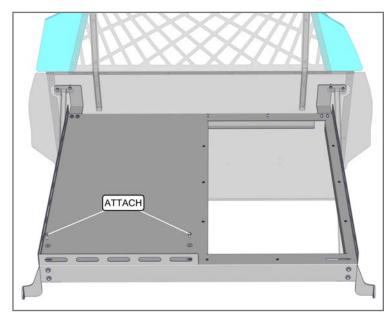


Attach the Edge Bracket to the top of the Cargo Cover Frame securing to the Driver Side Front Support Bracket with provided (2) 1/4" washers and 1/4-20 bolts.

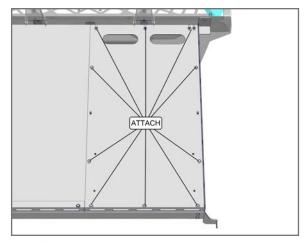

- After equipment is attached to the removable Cargo Cover Tray, insert and secure to the Cargo Cover Frame with provided (7) ¼" washers and ¼-20 bolts, and rear section with (4) flange nuts.
- 8. Now that the Cargo Cover Tray is installed, fully tighten the previously "loosely" attached Front and Rear Support Brackets at this time. "See Steps 1 & 3"

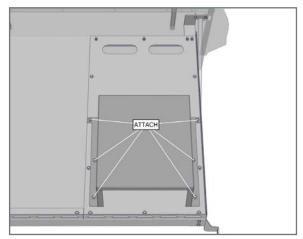

10. Attach the Cargo Cover Tray to the Cargo Cover Frame with provided (6) 1/4" washers and 1/4-20 bolts.

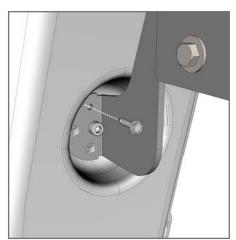



9. Anchor the Front Support Brackets in place with (6) #8 x 3/4" Tek Screws.

