



BAR-STYLE REAR WINDOW ARMOR

2015-2019 DODGE RAM

Installation Instructions

475-9196



Rear Window Armor



D/S Side Mount Bracket



Lower Mount Brackets



P/S Side Mount Bracket



Fold rear seat upwards to remove the (8) 18mm bolts from the underside of seat. Disconnect Speaker and set aside.



Lift rear seat upward to allow it to unhook from the rear latch. Set seat aside.



Remove (3) 13mm OEM bolts from child restraint loops.



Loosely attach Lower Brackets into place using the previously removed (3) 13mm OEM bolts. You will need to remove ring from child restraint loops to retrieve bolts.




Remove "C" pillar upper OEM trim by first removing phillips screw from behind plastic clip. Then carefully pull trim away from frame. You will need to separate the upper trim from lower trim and set aside.




Before installing Side Mount Brackets, you will need to pry the wire loose from OEM frame down to lower trim on C Pillar.



Then remove the white clip from plug.

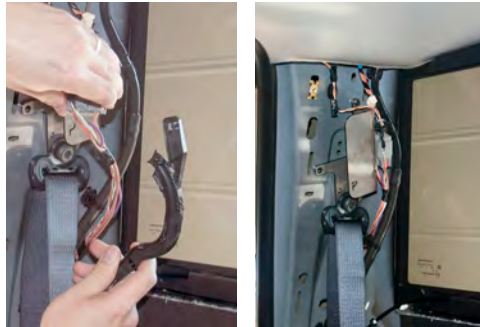

Remove plastic channel from lower section of wire. Once bracket is in position, wire will set between bracket and rear window.

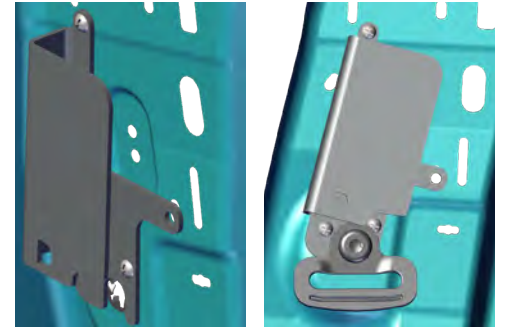

Using the slot on bracket, slide behind seat belt bolt and use the hole closest to door jam and align with OEM hole. Once in proper position secure Side Mount Brackets to frame using provided (3) tek screws.



Replace OEM "C" pillar trim and tighten the (3) Lower Brackets



Secure Rear Window Armor to all brackets using provided (3) flange nuts on Lower Brackets and (6) tek screws on Side Brackets. Once Window is in position, tighten all hardware.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 2/25

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.

050-0141-00



