




INSTALLATION INSTRUCTIONS

'13+ PI UTILITY STORAGE SYSTEM

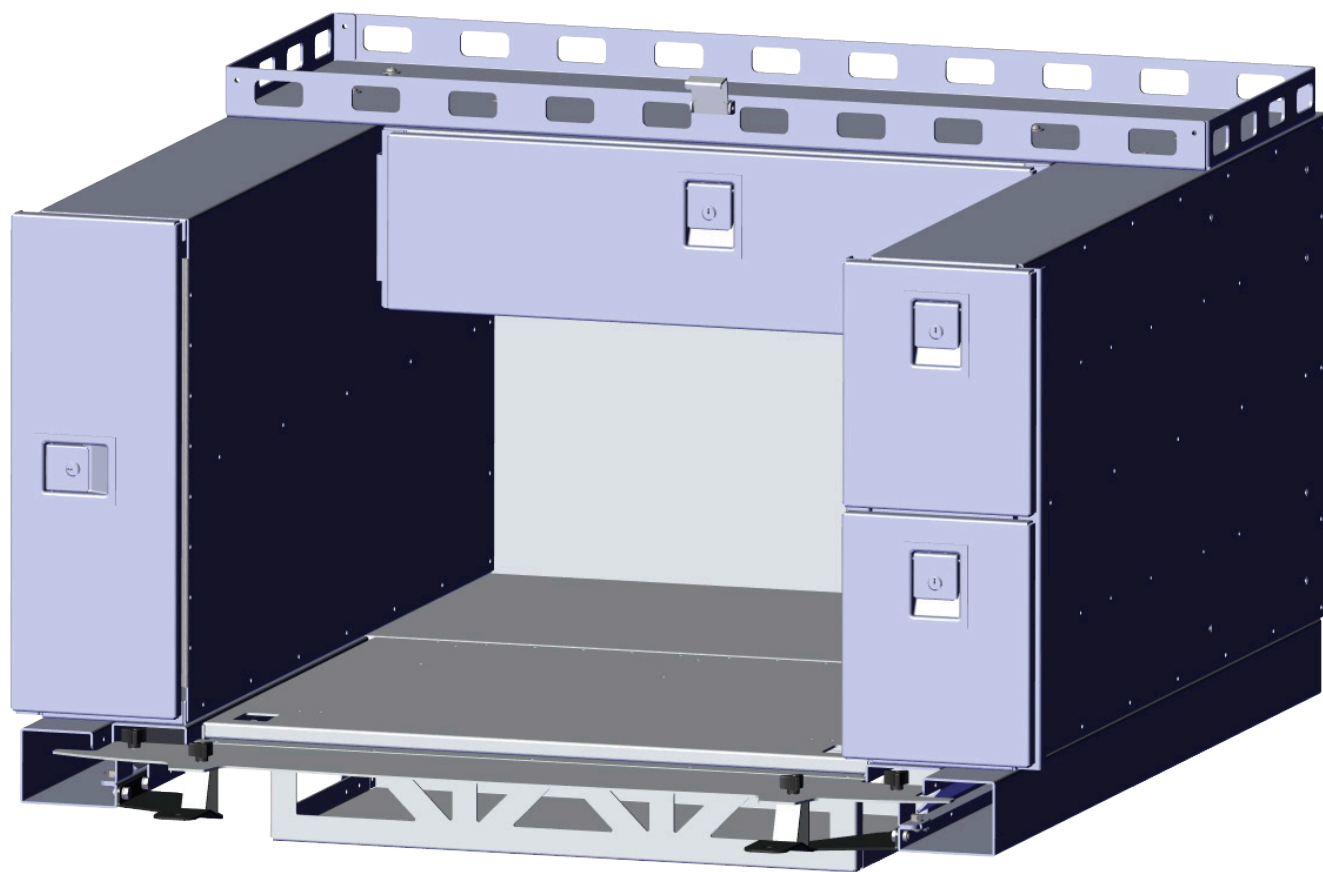




INSTALLATION INSTRUCTIONS

Before You Install Jotto Storage System


You **MUST** remove spare tire and jack. Flip spare tire over, store jack in the void and remount with provided stud.

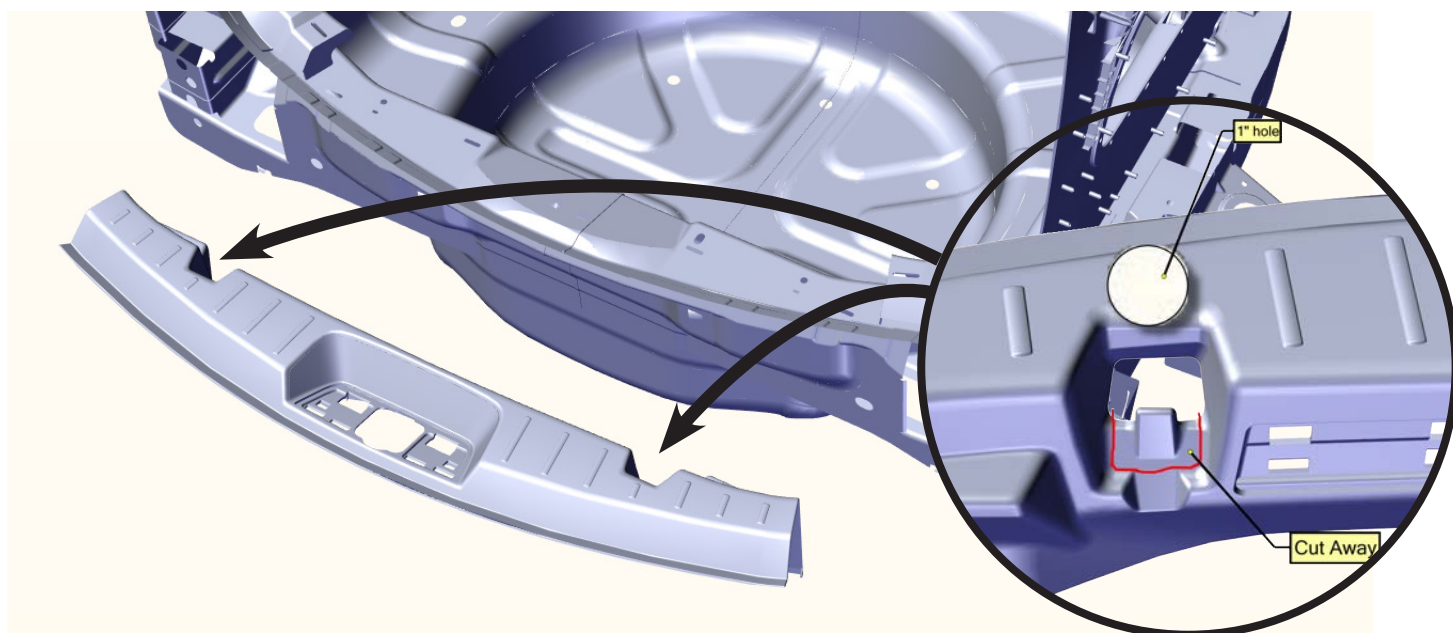

Drill 1" hole into the rear hatch door sill trim and cut/remove cargo hook on both sides. Then Remove (2) 8mm bolts.




INSTALLATION INSTRUCTIONS


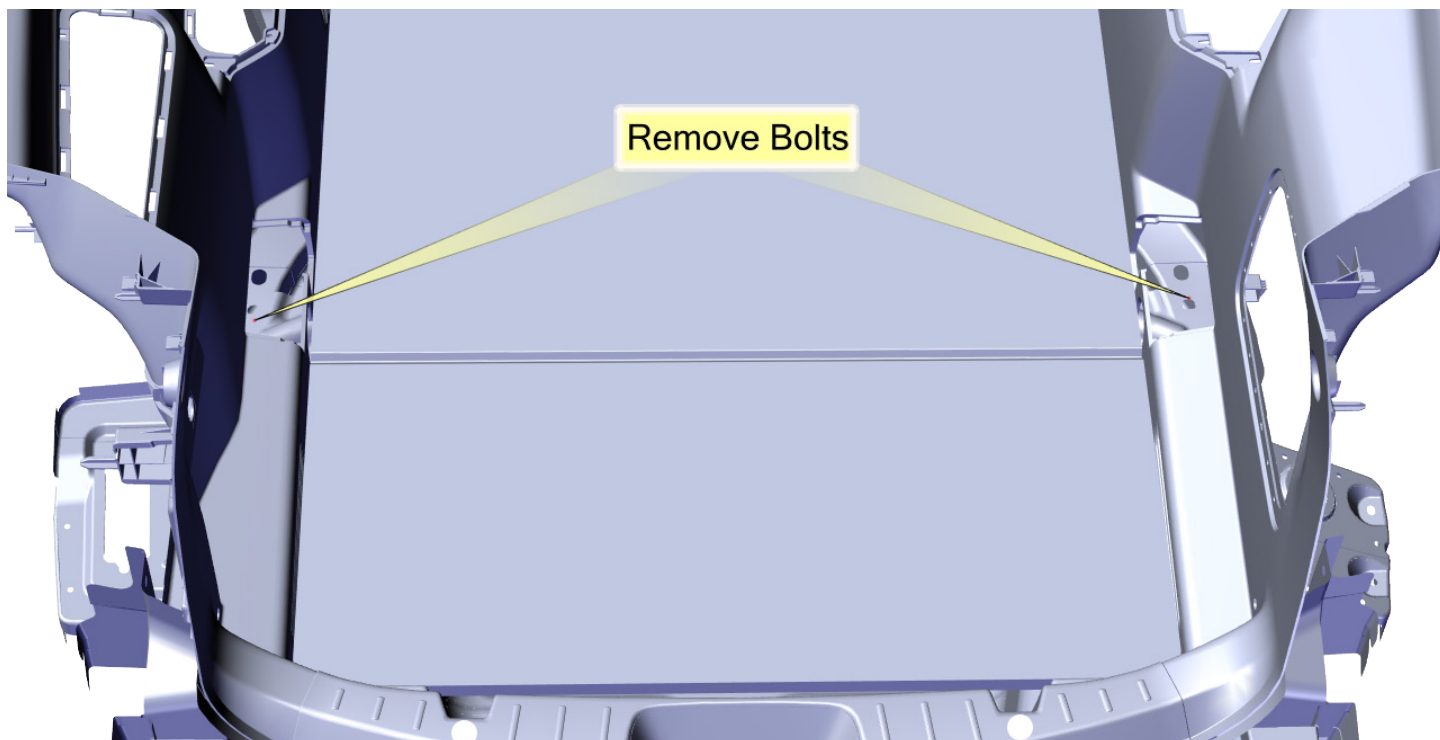


Remove (2) 11mm bolts from OEM flooring and remove flooring. (2 pieces)




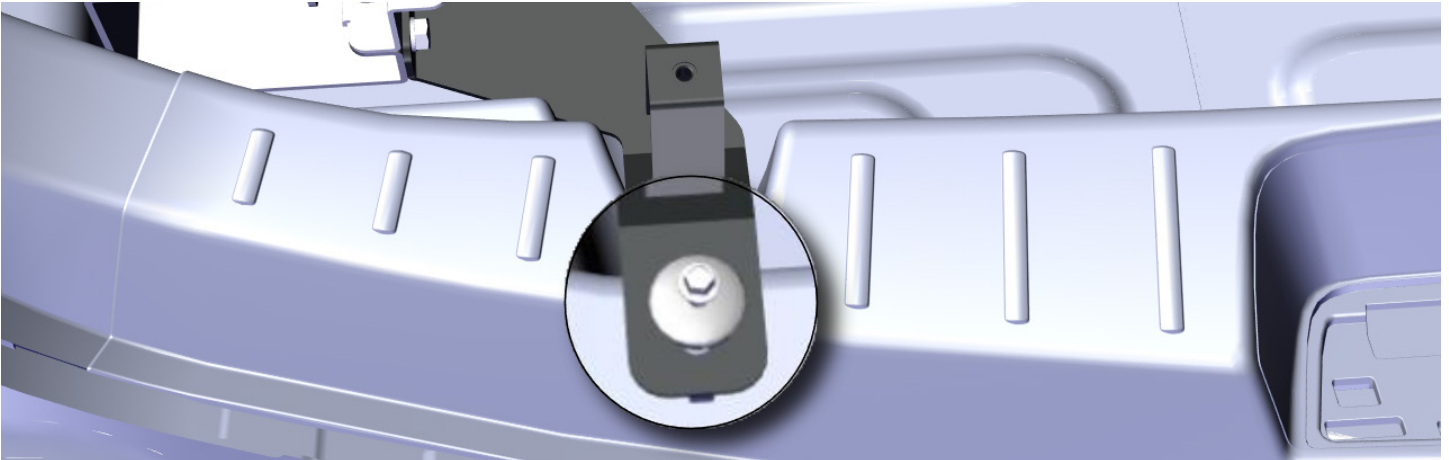

Place Brackets through OEM rear hatch door sill trim and loosely secure reusing OEM 8mm bolts.

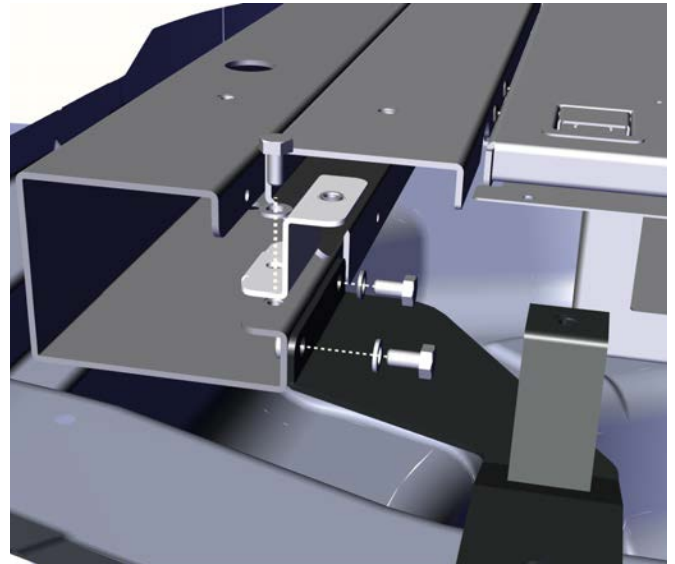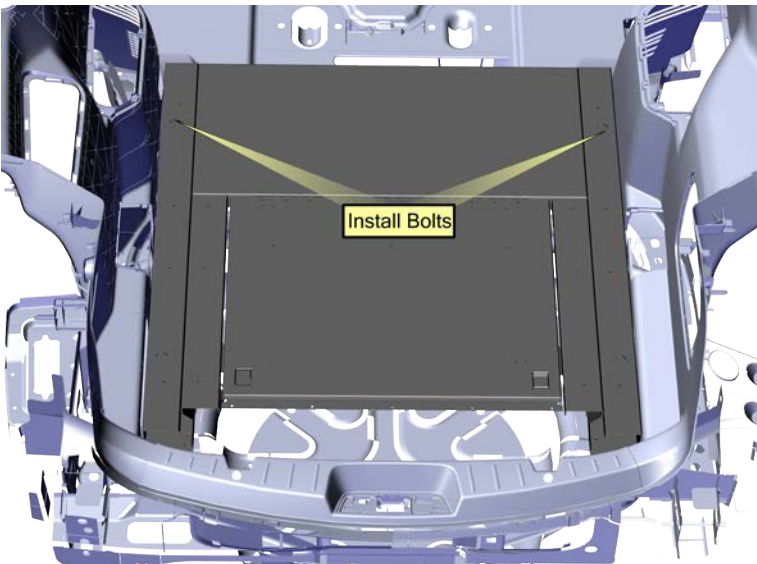


Position Storage System Flooring into vehicle and secure rear of flooring into holes of either side of flooring using (2) OEM 11mm bolts. Secure front of Storage System Flooring onto previously installed Brackets using (4) Buttonhead Cap Screws. Place provided caps on drill holes of OEM trim.

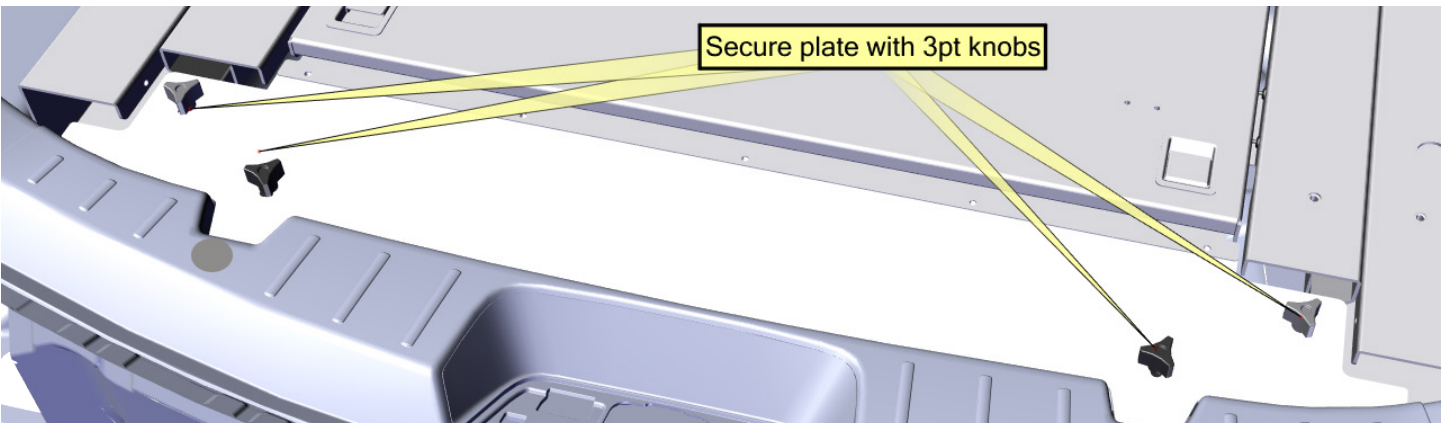


Place Spacer Cover onto opening of flooring and secure using provided (4) 3 point knobs.

Horizontal Drawer Option: (Outside of Vehicle)

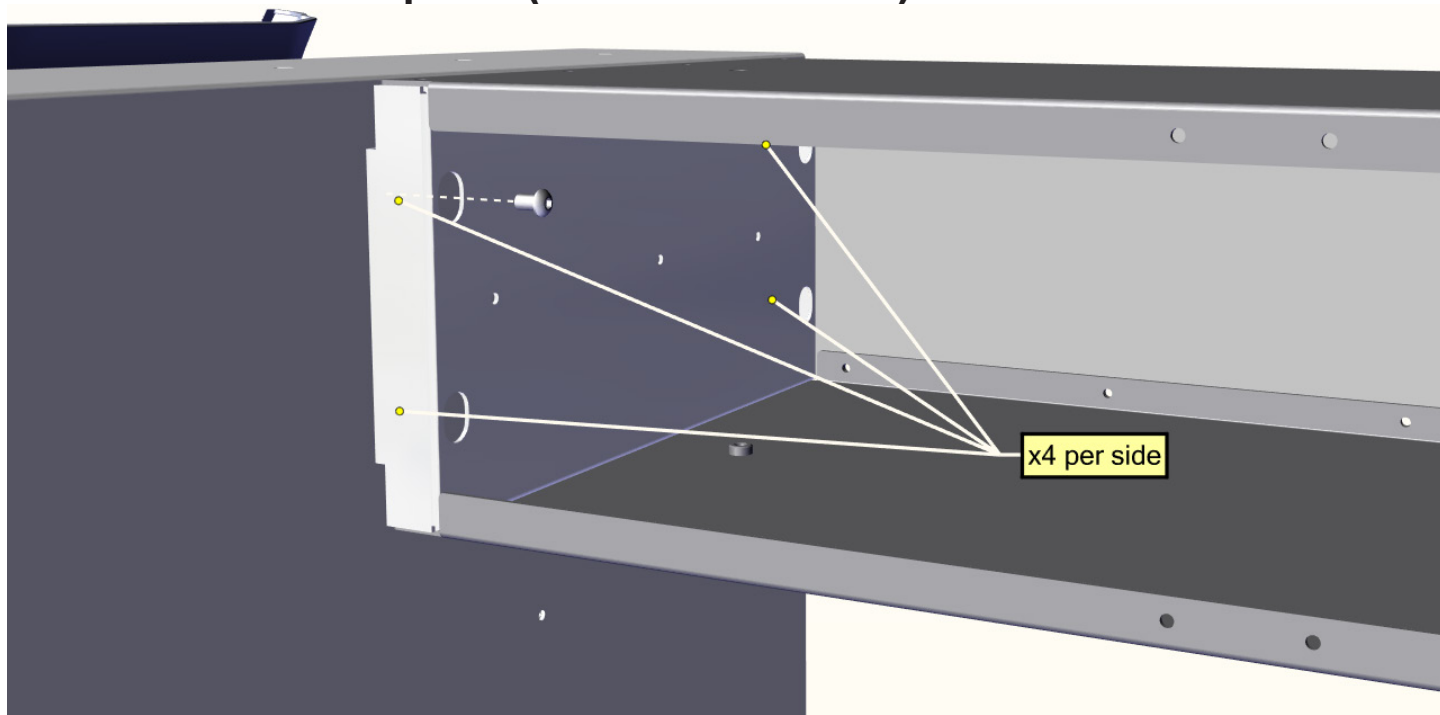

If Horizontal Drawer option is purchased, this step is easier done outside of vehicle.

Holding drawer for easiest view and access, place a Buttonhead Cap Screw and Washer through rear top hole opening. Loosely secure to thread hole of tower. Then rotate drawer into proper position and place a Buttonhead Cap Screw and Washer through front top hole opening, secure to threaded holes of tower.


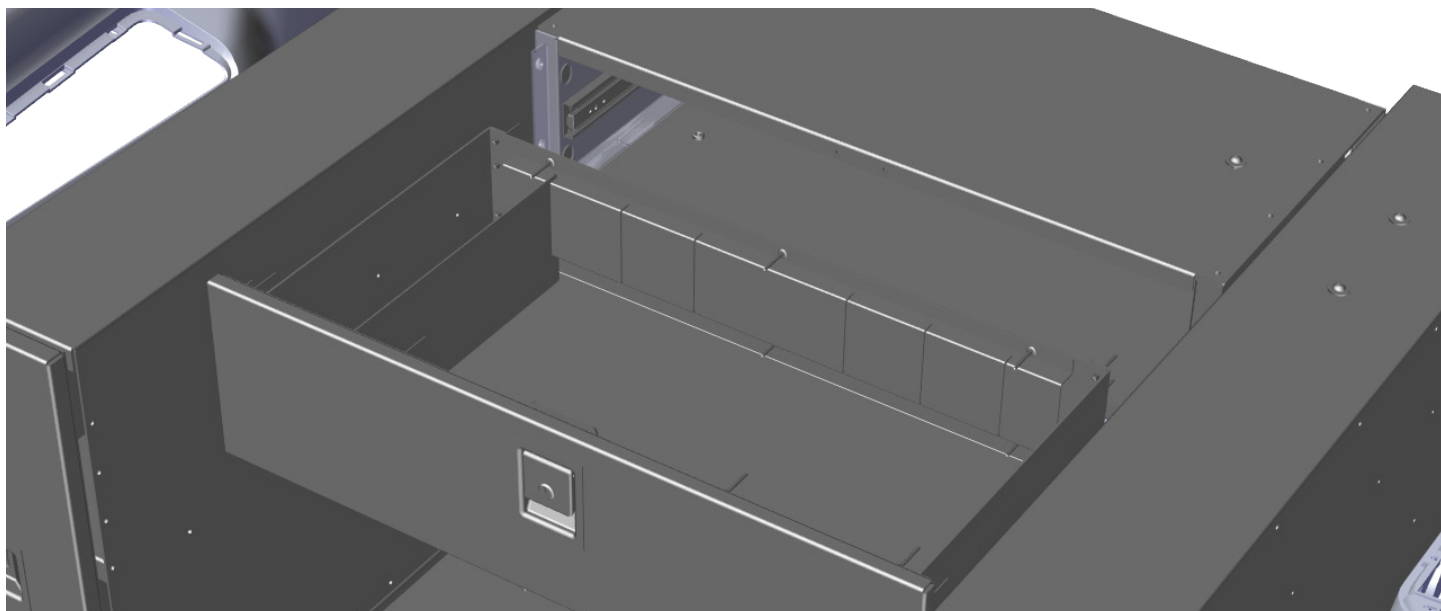


Tighten all hardware. Slide Drawer back into position






INSTALLATION INSTRUCTIONS

Package Tray: (Outside of Vehicle)

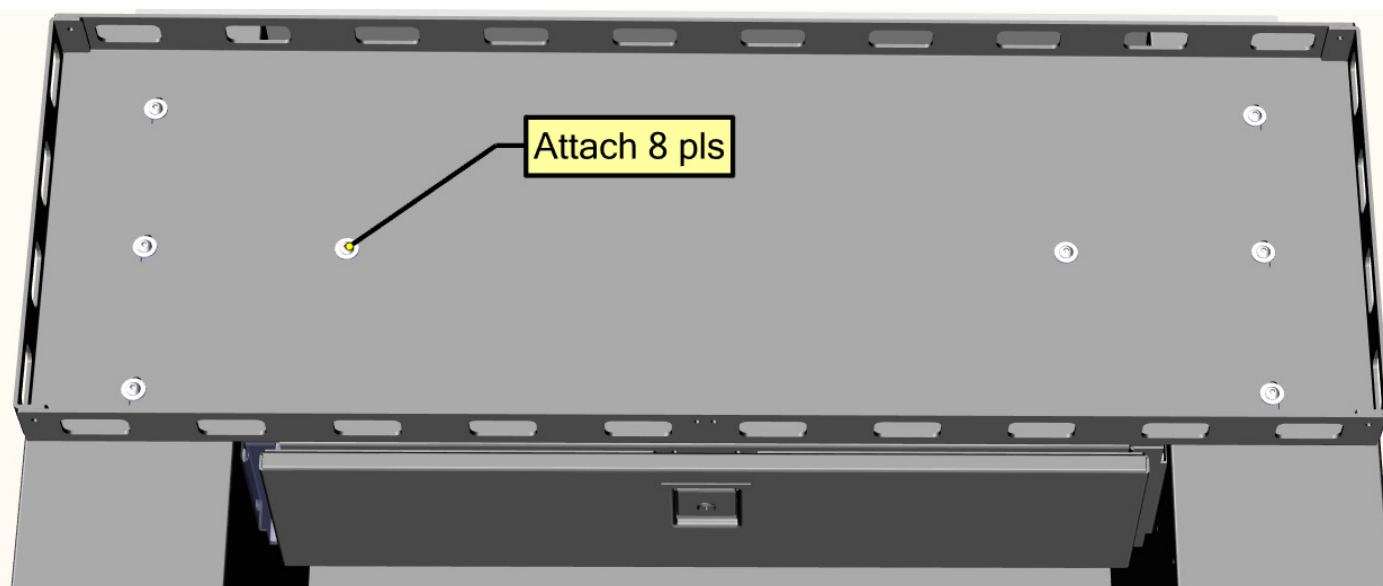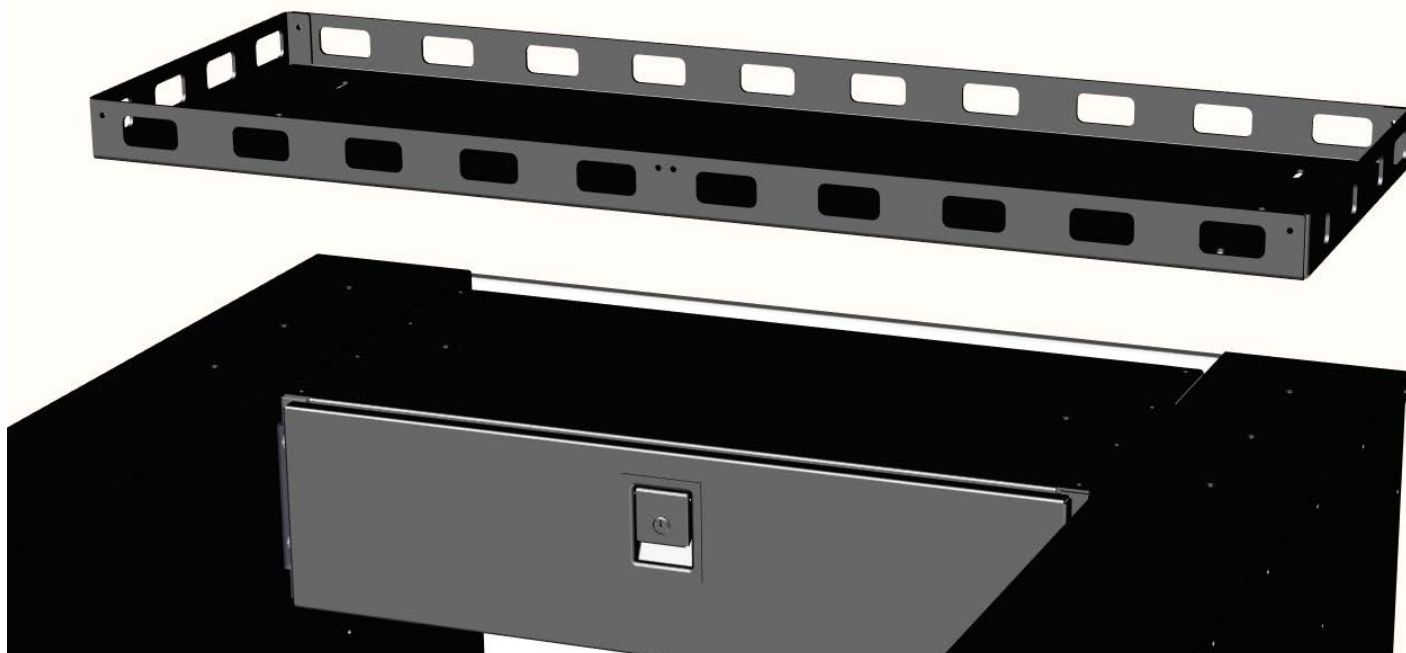


Set Package Tray on top of rear of towers and/or Horizontal Drawer. Secure into place using (8) Buttonhead Cap Screws (*use (6) Buttonhead Cap Screws if purchased without Horizontal Drawer).

Tower Options:

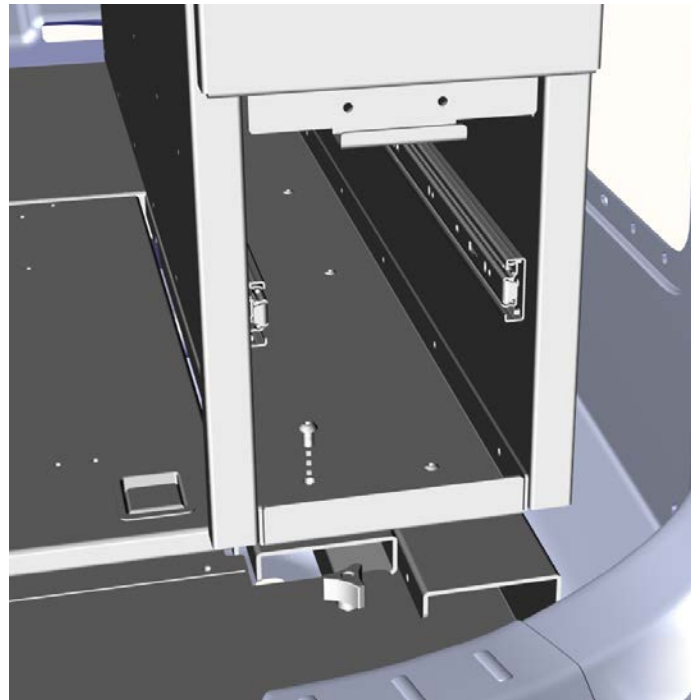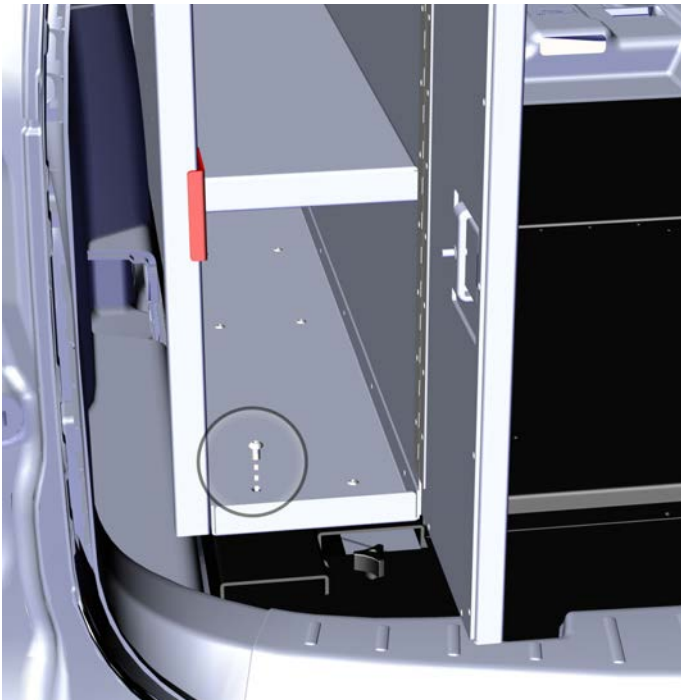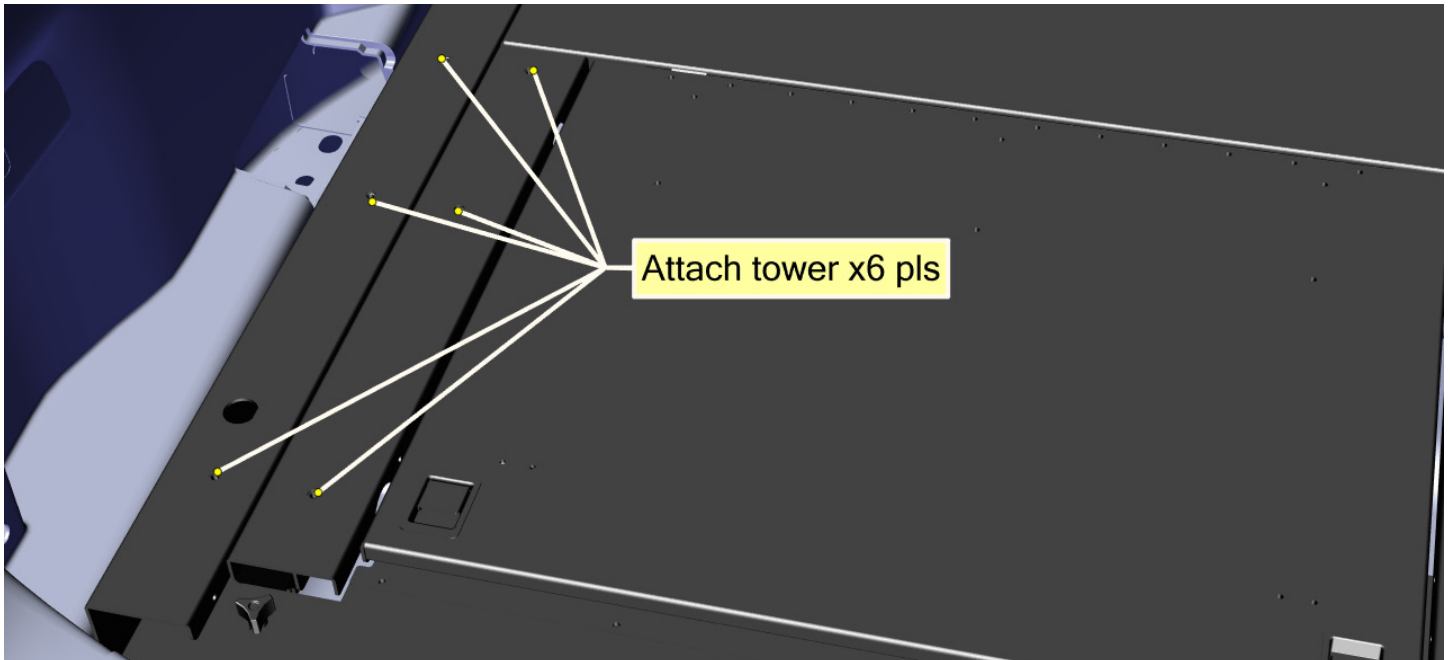

Position Towers onto Storage System Flooring and either side of access door. Secure to flooring using (6) Buttonhead Cap Screws per tower into provided openings.

Backstop: (Not Needed if Mounting Jotto Desk Cargo Barrier)

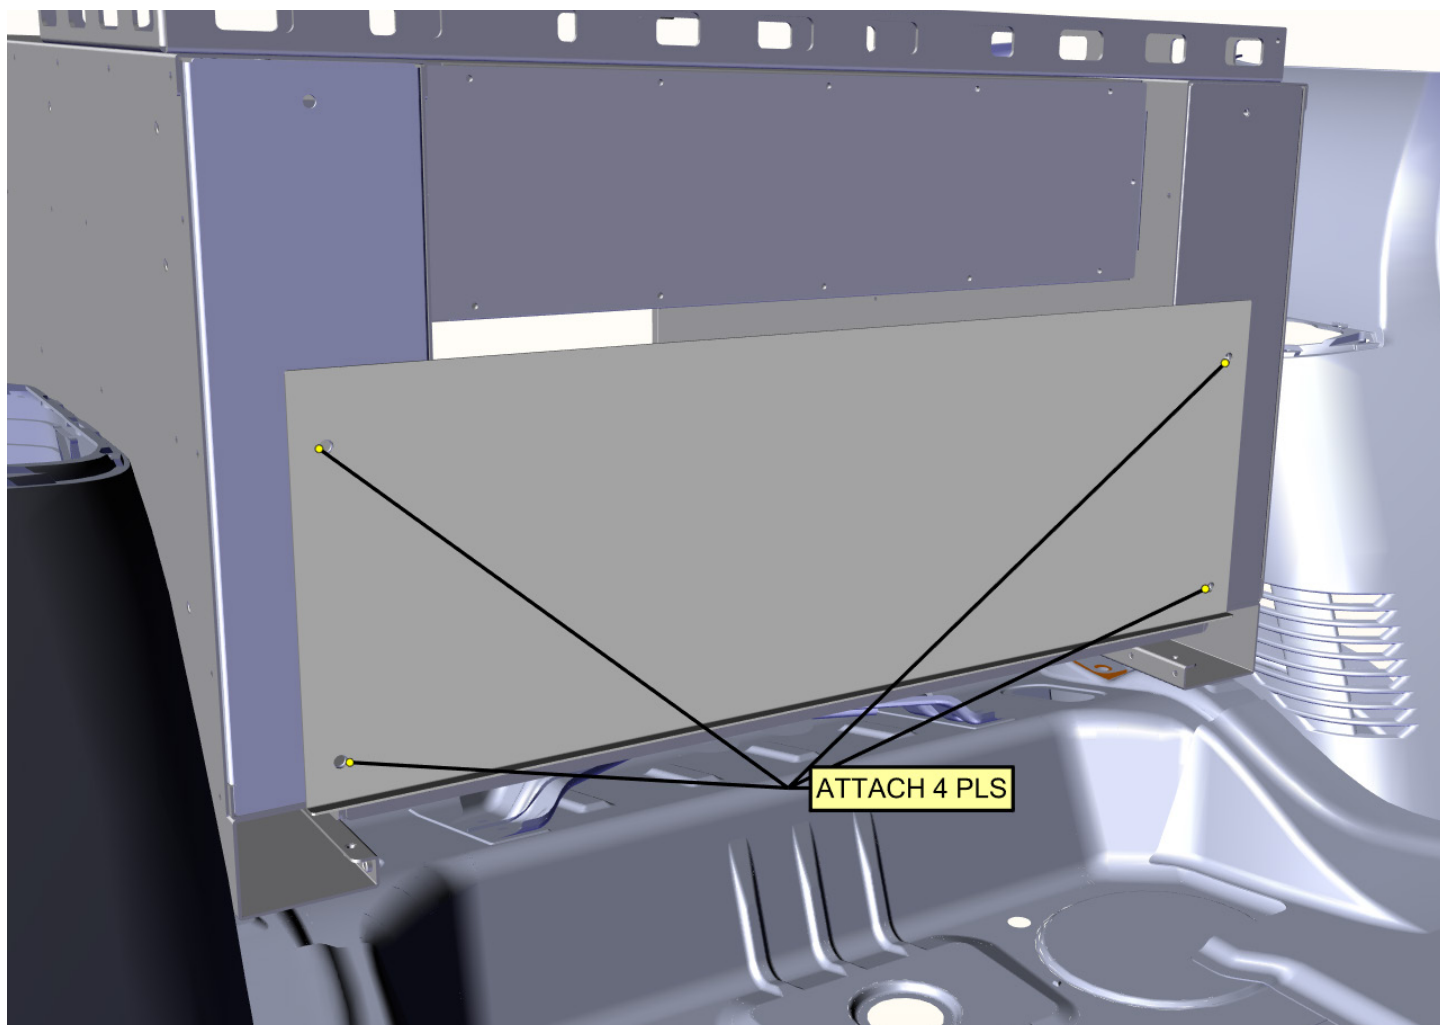

Attach Backstop onto Storage System using (4) Buttonhead Cap Screws.