



# INSTALLATION INSTRUCTIONS

## '15-'20 CHEVY TAHOE

### Vehicle Partition Featuring Unidirectional Recessed Housing

Before beginning the installation, confirm that you have received all of the parts for your package.  
Read the instructions completely before starting installation.



#### TOOLS NEEDED:

- Ratchet
- 7/16" Socket
- 10 mm Socket
- T50 Torx Male Socket

#### Parts Included:


- Hardware Bag With Necessary Nuts, Bolts, Etc.




(2) B Pillar Bracket




(2) Mounting Foot

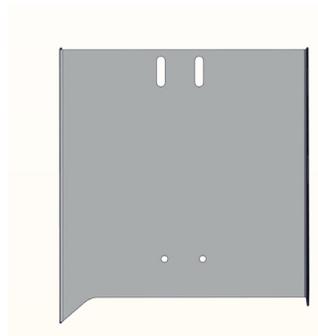

Center HSEP

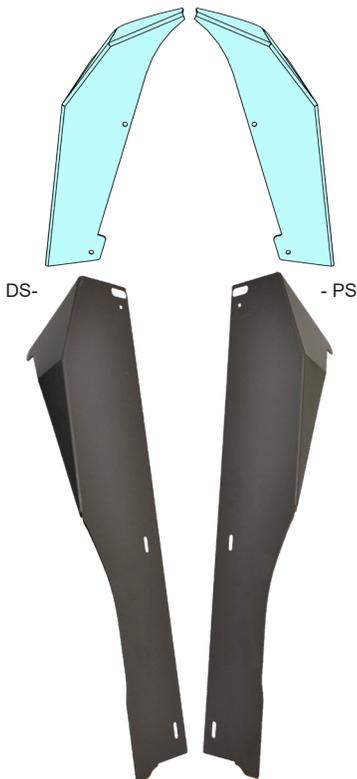


Wings Set

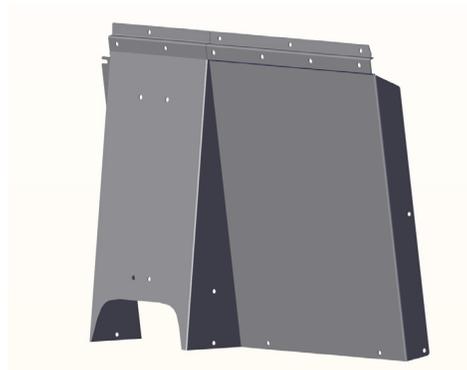

Uni-Directional Recessed Housing



# INSTALLATION INSTRUCTIONS

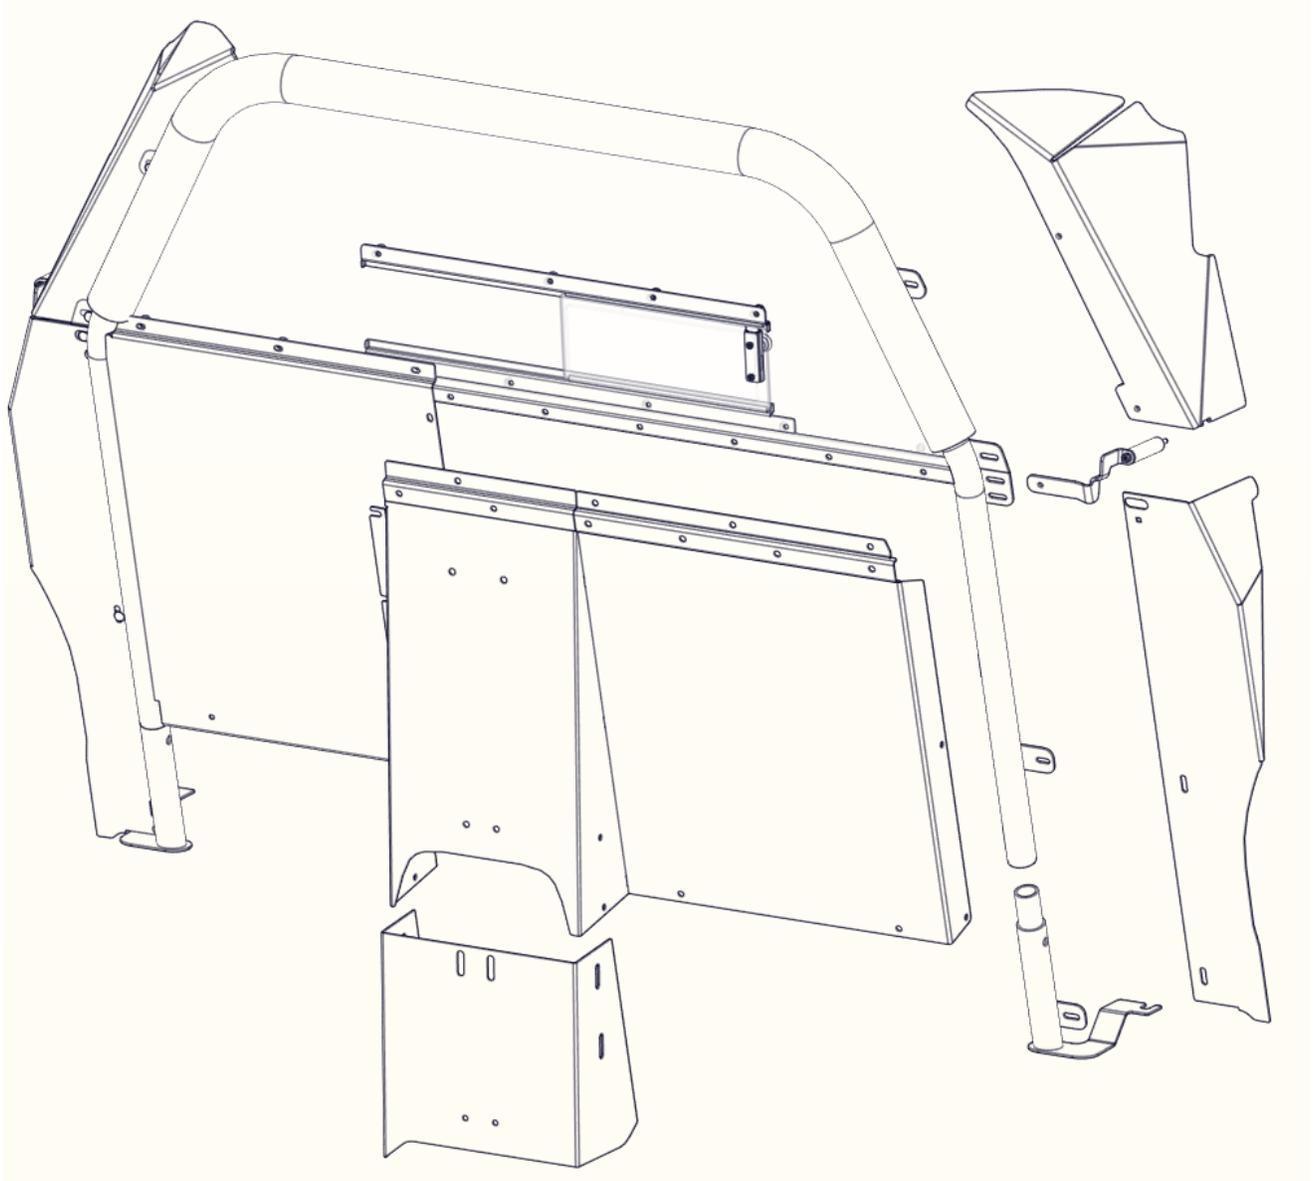



## INSTALLATION INSTRUCTIONS

1. Begin by removing rear OEM trim cover from outer seat rail. Pull trim away from seat rail. Repeat on other side. (Pic 1)
2. From front seat area of the same seat rail, pop the trim loose and slide forward. Set aside and repeat on other side. (Pic 2)
3. Move seats completely forward. Loosen the rear/outer OEM T50 seat bolt exposed when removed OEM trim. (Pic 3)
4. Push seat up slightly to slide the Foot Mount Bracket under seat rail, between rail and carpet. Leave bolt loose at this time. Repeat on other side. (Pic 4)
5. Use a small screw driver to pop the lower cover off of the entry assist handle and set aside. Remove 10mm bolt from inside handle. Repeat on other side. (Pic 5)
6. Use provided 5mm hex bolt & spacer to loosely attach B Pillar Bracket. Through lower opening in entry assist handle. Repeat for other side. (Pic 6)




Pic 1



Pic 2



Pic 3

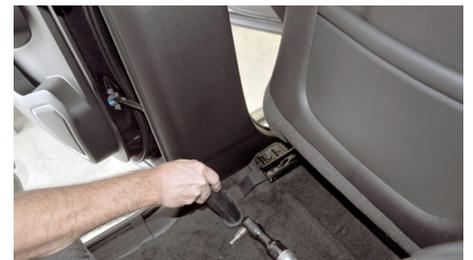

Pic 4



Pic 5



Pic 6



## INSTALLATION INSTRUCTIONS

7. Install Partition frame into vehicle through DS door and position onto mounting feet. (Pic 7)
  8. Lean Partition frame forward and loosely attach B Pillar Brackets to middle hole of frame. Center the partition. Once centered, tighten all hardware at this time. (Pic 8)
  9. Reinstall OEM outer seat trim onto front seat rail. (Pic 9)
  10. Loosely attach Center HSEP onto UDRH outside of vehicle using (6) carriage bolts and flange nuts.
  11. Place UDRH with Center HSEP into vehicle. Attach UDRH to Partition Frame using provided carriage bolts and flange nuts. Push carriage bolts in from prisoner side of partition. Tighten all bolts/nuts. (Pic 10)
- SOLO INSTALL NOTE: Use masking tape over carriage bolts to hold bolt in place while attaching flange nuts from front side of partition.**
12. Install Lower Steel Wing from prisoner side using (3) carriage bolts and flange nuts. Repeat on other side. (Pic 11)
  13. Install Upper Poly Wing from officer side using a carriage bolt and flange nut on the lower hole. The top of the Poly Wing should be secured with carriage bolt as well. (Pic 12) Install black caps on all flange nuts.



Pic 7




Pic 8



Pic 9



Pic 10

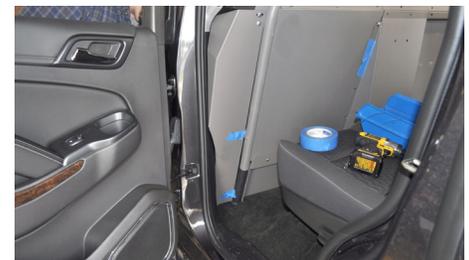

Pic 11



Pic 12

