Before beginning the installation, confirm that you have received all of the parts for your package. Read the instructions completely before starting installation.

Front Support Brackets

Driver Side / Passenger Side
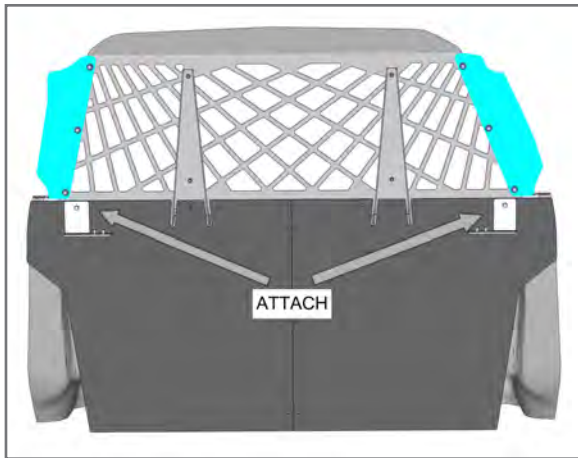
Rear Support Brackets
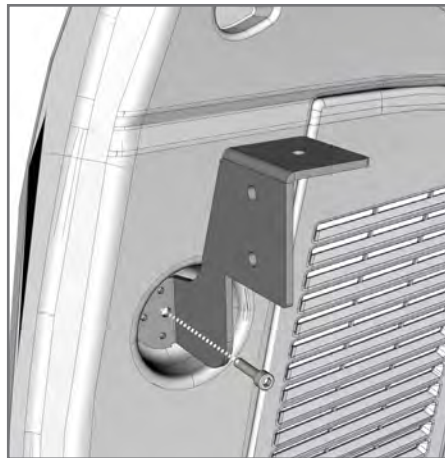
Equipment Cover

Cargo Cover Frame
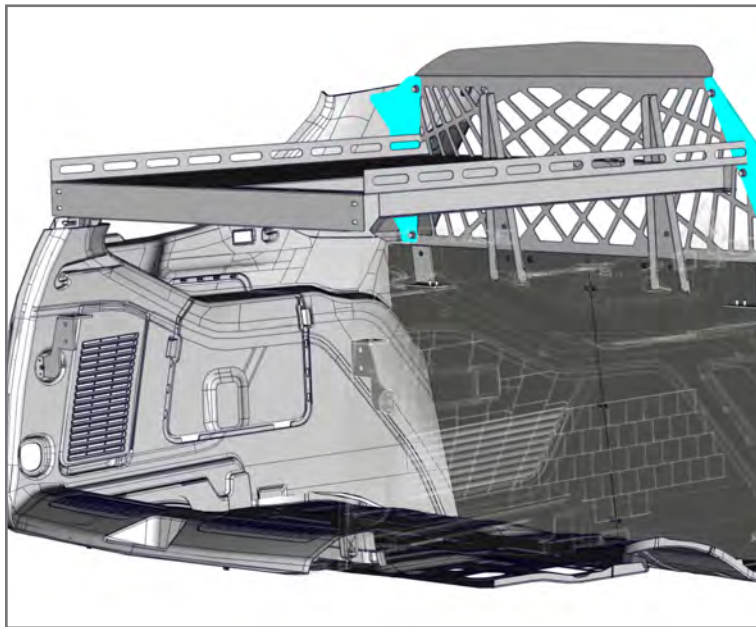
Cargo Cover Tray

Edge Bracket

1. Remove the outer (2) ¼-20 x ½" bolts attaching the Cargo Cover to the Top Bar Frame. Loosely secure the Driver Side and Passenger Side Rear Support Brackets with provided (2) ¼" lock washers and ¼-20 x ¾" bolts.
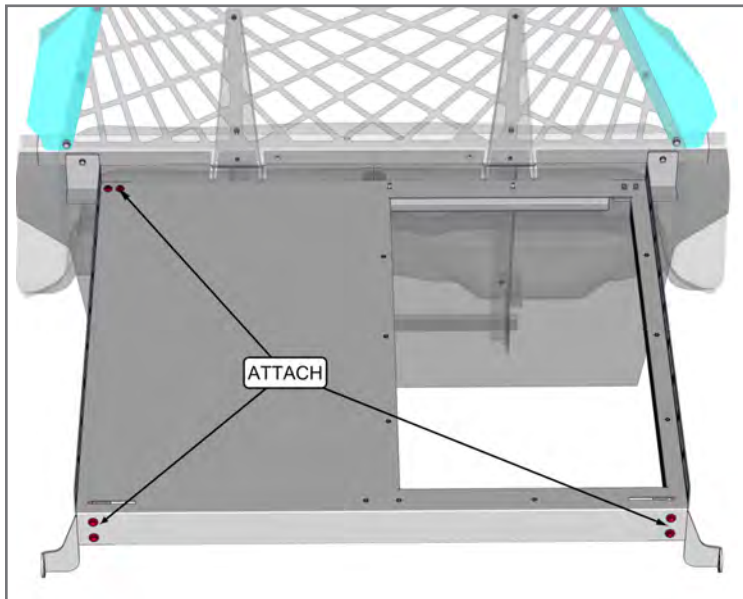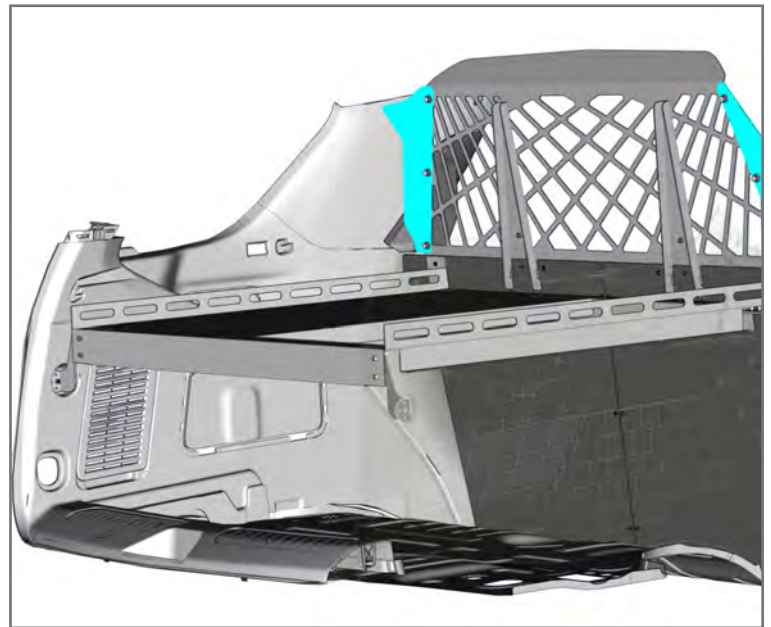
2. Unscrew the (2) OEM Trunk Cargo Net Tie-Down Hooks.

3. Loosely secure the Driver Side and Passenger Side Front Support Brackets with provided (2) M6 x 1.0 Socket Head Cap Screw.


4. Place the Cargo Cover Frame onto, Driver Side / Passenger Side Front Brackets and Rear Support Brackets.


5. Secure the Cargo Cover Frame to the Drivers Side Rear Support Bracket with provided (2) ¼-20 flange nuts and the Front Support Brackets with (4) ¼" washers and ¼-20 bolts.
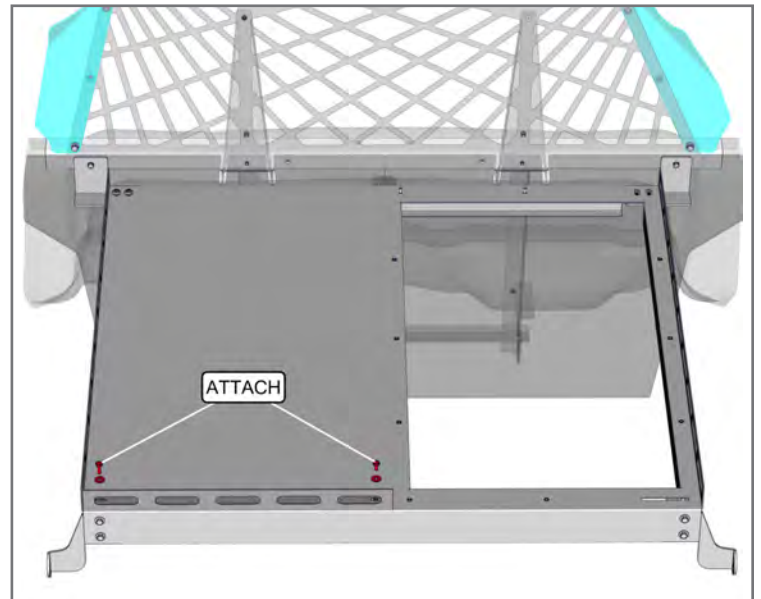
6. Attach the Edge Bracket to the top of the Cargo Cover Frame securing to the Driver Side Front Support Bracket with provided (2) ¼" washers and ¼-20 bolts.
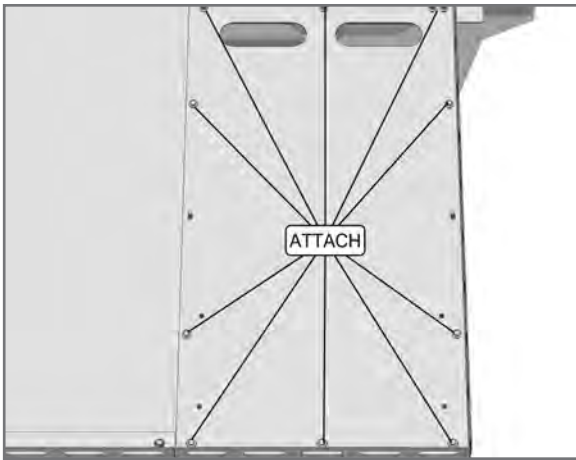
7. After equipment is attached to the removable Cargo Cover Tray, insert and secure to the Cargo Cover Frame with provided (7) ¼" washers and ¼-20 bolts, and rear section with (4) flange nuts.

8. Now that the Cargo Cover Tray is installed, fully tighten the previously "loosely" attached Front and Rear Support Brackets at this time. **"See Steps 1 & 3"**

9. Anchor the Front Support Brackets in place with (6) #8 x ¾" Tek Screws.
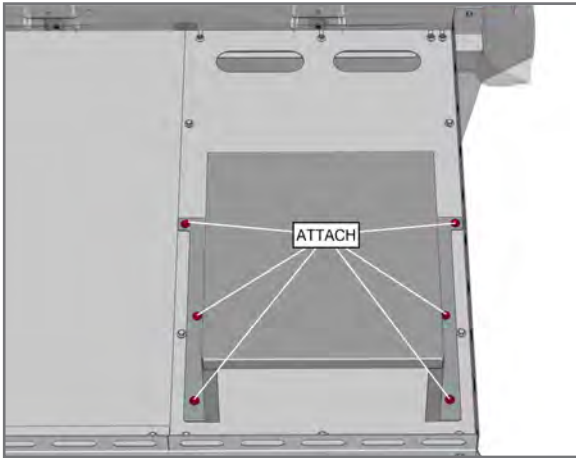
10. Attach the Cargo Cover Tray to the Cargo Cover Frame with provided (6) ¼" washers and ¼-20 bolts.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886